ICOM

INSTRUCTION MANUAL

HYBRID IP TRANSCEIVER

IP730D Lite
IP740D Lite

INTRODUCTION

1 ACCESSORIES

2 BEFORE USING

3 USING THE CELLULAR MODE

4 USING THE IDAS MODE

5 OTHER FUNCTIONS

6 SET MODE

7 FOR YOUR REFERENCE

Icom Inc.

Thank you for choosing this Icom product.
This product is designed and built with Icom's state of the art technology and craftsmanship. With proper care, this product should provide you with years of trouble-free operation.

IMPORTANT

FIRST, CAREFULLY READ INSTRUCTIONS that is boxed with the transceiver.

SAVE THIS INSTRUCTION MANUAL— This instruction manual contains additional important operating instructions for the transceiver.

Icom and the Icom logo are registered trademarks of Icom Incorporated (Japan) in Japan, the United States, the United Kingdom, Germany, France, Spain, Russia, Australia, New Zealand, and/or other countries.
The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Icom Inc. is under license.
AQUAQUAKE is a trademark of Icom Incorporated.
All other products or brands are registered trademarks or trademarks of their respective holders.


Icom is not responsible for the destruction, damage to, or performance of any Icom or non-Icom equipment, if the malfunction is because of:
- Force majeure, including, but not limited to, fires, earthquakes, storms, floods, lightning, other natural disasters, disturbances, riots, war, or radioactive contamination.
- The use of Icom transceivers with any equipment that is not manufactured or approved by Icom.

Section 1 ACCESSORIES

Supplied accessories.....1-2
Attachable accessories.....1-2
◇ Antenna 1-2
◇ Battery pack/Battery case.....1-3
◇ Belt clip 1-3

Supplied accessories

Battery pack

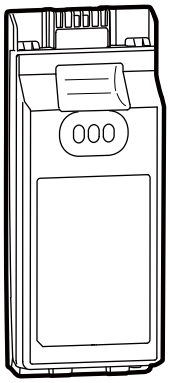

Belt clip



Connector cover and screw




NOTE: Some accessories are not supplied, or the shape is different, depending on the transceiver version.

Attachable accessories

◇ Antenna

Connect an optional antenna to the antenna connector.

CAUTION:
- **DO NOT** carry the transceiver by holding only the antenna.
- **DO NOT** connect an antenna other than those listed in this manual.
- **DO NOT** transmit without an antenna.

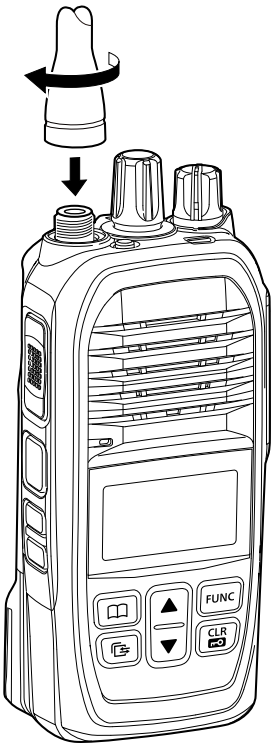


Attachable accessories


◇ Battery pack/Battery case

CAUTION:
- **DO NOT** attach or detach the battery pack or the battery case when the transceiver is wet or soiled. This may result in water or dust getting into the transceiver, battery pack, or battery case and may damage them.
- Keep the battery pack terminals clean. It's a good idea to occasionally clean them.

To attach:
1. Slide the battery pack in the direction of the arrow. (❶)
2. Push the battery pack until the battery sliding locks make a 'click' sound. (❷)

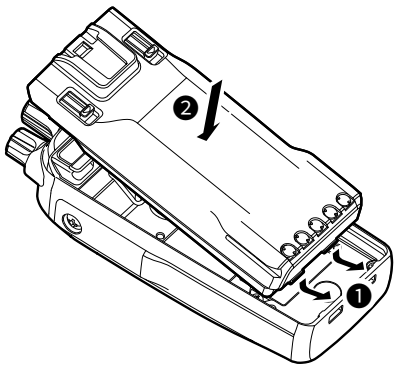


To detach:
1. Pull both battery sliding locks in the direction of the arrow. (❶)
2. Lift up to detach the battery pack. (❷)

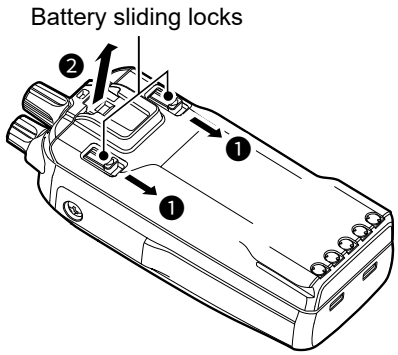

◇ Belt clip

To attach:
1. Remove the battery pack from the transceiver, if it is attached.
2. Slide the belt clip in the direction of the arrow until the belt clip is locked and makes a 'click' sound.

To detach:
1. Remove the battery pack from the transceiver, if it is attached.
2. Lift the tab up (❶), and slide the belt clip in the direction of the arrow (❷).
   ⓘ Be careful not to break your fingernail.

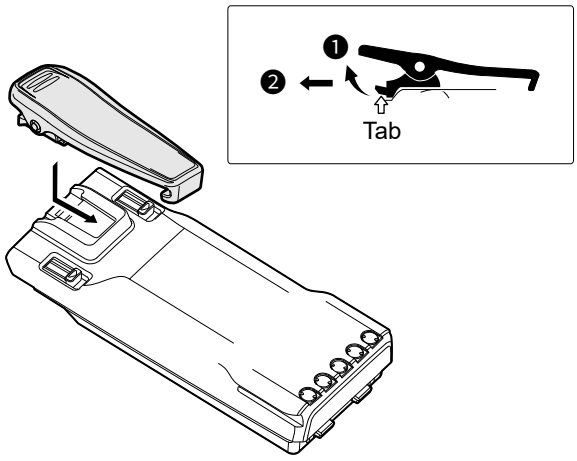


Section 2 BEFORE USING

Panel description 2-2
◇ Front, top and side panels 2-2
◇ Status indicator 2-2
◇ Multi-connector 2-2
◇ About the assignable key functions 2-2
Function display 2-3
◇ Cellular mode 2-3
◇ IDAS mode 2-3
◇ Cellular/IDAS mode 2-3
Basic operation 2-4
◇ Turning ON the transceiver 2-4
◇ Adjusting the volume level 2-4
◇ Using the Key Lock function 2-4
◇ Selecting the operation mode 2-4

Panel description

◇ Front, top and side panels

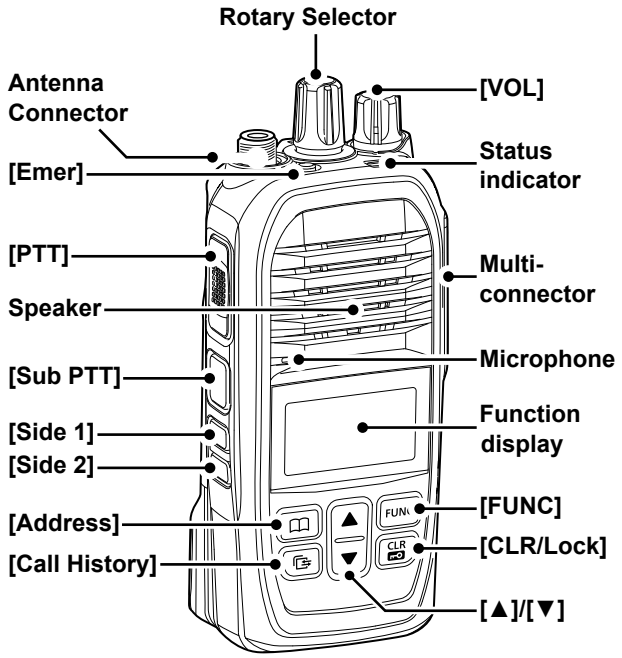

◇ Status indicator


• Lights red:	Transmitting.
• Lights green:	Receiving or squelch is open.
• Lights yellow:	Receiving and transmitting in the Full-Duplex mode.

◇ Multi-connector

Connects to an optional speaker microphone or headset.

ⓘ Turn OFF the transceiver before attaching or detaching the microphone.

CAUTION: DO NOT use the transceiver without the connector cover or optional equipment attached. The transceiver meets IP67 requirements for dust-tight and waterproof protection only when the connector cover or the optional speaker microphone is attached. See page 7-5 for the usable speaker microphones.

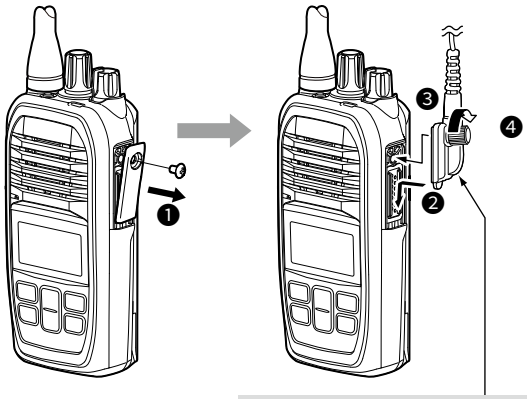

CAUTION: Firmly attach to the Multi-connector, but do not overtighten. A loose connection will allow water intrusion into the connector. Over-tightening the connection can damage the transceiver.

◇ About the assignable key functions

Functions described on page 5-11 may be assigned to the [Sub PTT], [Side 1], and [Side 2] keys, depending on a presetting. Hold down or push these keys to use the assigned functions.
You can also assign the functions in the Detailed Set mode (p. 6-4).

Function display



Cellular mode



IDAS mode

◇ Cellular mode

	Displays the signal strength level by 3 bars. ⓘ A connected network type (4G or 3G) is displayed on the left top.
	• Blinks when the transceiver location is out of the service area, or the transceiver cannot receive a control signal. • Displayed if the transceiver has not been authenticated. ⓘ A connected network type (4G or 3G) is displayed on the left top.
	All/Group Call
	Talkgroup Call*1
	Individual Call
	Phone Call*1
P	Displayed when the P-Bell function is ON. (p. 3-8)

◇ IDAS mode

	Displays the relative receive signal strength level.
	Displayed when the signal level is low.
	All/Group Call
	Individual Call
	Displayed when the Encryption function is ON. (p. 4-4)
H	Displayed*2 when high output power is selected.
L1	Displayed*2 when low output power is selected. ⓘ "L2" is displayed for 2 W, "L1" is displayed for 1 W.
R	Displayed*2 when a receive-only channel is selected.
	Displayed when the channel is in the audible (unmuted) mode.

◇ Cellular/IDAS mode

	• Displayed when the Voice Recorder function is ON. (p. 5-10) • Blinks while recording audio.
	Displayed when Bluetooth is activated. (p. 5-2)
	Displayed when a Bluetooth device is connected. (p. 5-2)
	Displayed when the Key Lock function is ON. (p. 2-4)
VOX	Displayed when the VOX function is ON. (p. 6-3)
E	Displayed when the Emergency Call function is ON. (p. 5-6)
	Displays the remaining battery charge. : Full : Mid : Charging required : Battery exhausted
F	Blinks when the transceiver is downloading a new firmware.
	Displayed when the Surveillance function is ON. (p. 5-11)
	Cellular mode: • Displayed when the Pocket Beep function is ON. (p. 3-8) • Blinks when a call is received. It blinks until the transceiver returns to the standby mode after a received signal disappears. **IDAS mode:** Displayed or blinks when a matching signal is received, depending on the presetting.
*3	• Displayed when valid position data is received. • Blinks when no valid position data is received.

*1 May be usable, depending on a presetting.
*2 Blinks when the transceiver temperature becomes hot.
*3 May not be displayed, depending on the transceiver version or a presetting.

Basic operation


◇ Turning ON the transceiver

NOTE: Before using the transceiver for the first time, the battery pack must be fully charged for optimum life and operation. See the BATTERY CHARGING section on the boxed INSTRUCTIONS.

- Rotate [VOL] clockwise to the 12 o'clock position to turn ON the transceiver.
  - ⓘ The dial is made tight for dust and water resistance.
  - ⓘ To turn OFF the transceiver, rotate [VOL] counter-clockwise until it makes a "click" sound.
  - ⓘ An opening text may be displayed, depending on a presetting.

◇ Adjusting the volume level


- Rotate [VOL] to adjust the volume level.
  - ⓘ The Adjustment screen is displayed while adjusting.

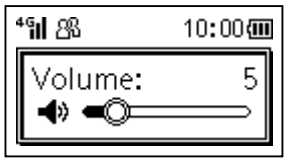

◇ Using the Key Lock function

You can use the Key Lock function to prevent accidental channel changes and unnecessary function access, depending on a presetting.
Functions except the following are electronically locked:
[PTT], [Sub PTT], [VOL], [Emer], and the Monitor function.

- Hold down [CLR/Lock] for 1 second to turn the Key Lock function ON or OFF.
  - ⓘ "🔒" is displayed while the function is ON.
  - ⓘ The Key Lock function may also be assigned to [Emer], depending on a presetting. In this case, hold down [Emer] for 1 second to turn the Key Lock function ON or OFF.

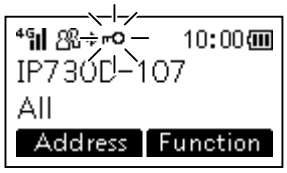


◇ Selecting the operation mode

You can select the operating mode, as shown below. See the section or page shown below for instructions on each operation mode.
Cellular mode: Section 3
IDAS mode: Section 4
Dual mode: p. 5-12

NOTE: About the Repeater (Bridge) mode:
The Repeater Mode relays received IDAS audio to the cellular transceiver group, while transferring the cellular radio conversations to the IDAS transceiver group. Ask your dealer about the mode details.

1. Push [FUNC] to display the function.
   - The Function screen is displayed.
2. Push [FUNC] to display "Mode Select," if another function is displayed.
   - ⓘ You may need to push [FUNC] several times, depending on a presetting.
3. Rotate Rotary Selector or push [▲] or [▼] to select the operating mode, and then push [Call History].
   - The operating mode is selected and then returns to the Standby screen.

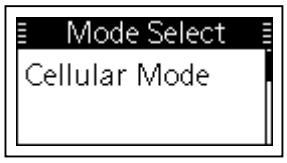


Section 3 USING THE CELLULAR MODE

Basic operation 3-2
◇ Operating keys.....3-2
◇ Receiving and Transmitting 3-3
Advanced operation.....3-4
◇ About the Talkgroup Call.....3-4
◇ Selecting a Talkgroup number 3-5
◇ Sending a message (Message Call).....3-6
◇ Browsing received messages 3-7
◇ Status Call 3-7
◇ Toggling the SIM card 3-8
◇ Pocket Beep function.....3-8
◇ P-Bell function.....3-8

Basic operation

◇ Operating keys

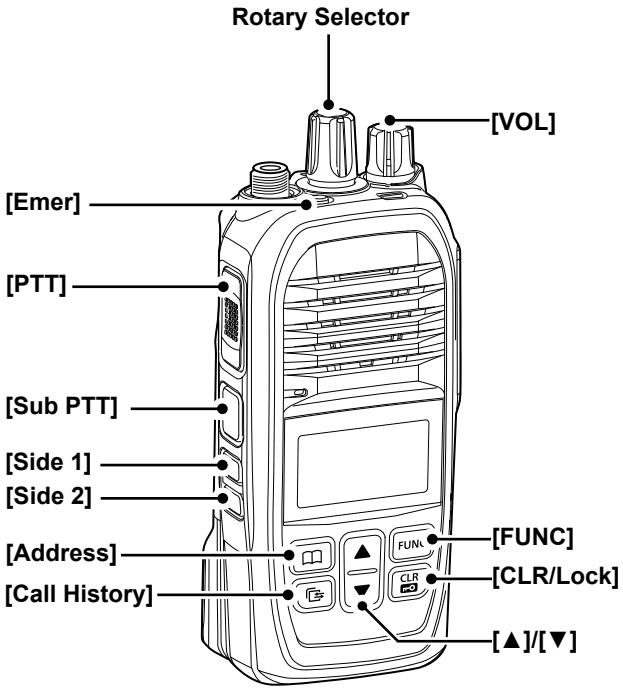

Rotary Selector	Rotate to select a channel or scroll the screen.
[Emer]	Hold down until “Emergency” is displayed to send an Emergency call. (p. 5-6)
[PTT]	Hold down to transmit, release to receive.
[Sub PTT] **[Side 1]** **[Side 2]**	Functions may be assigned, depending on a presetting. See page 5-11 for assignable function details. You can also assign functions in the Detailed Set mode (p. 6-4).
[Address]	• Selects a preset address. (p. 3-3) • Push to toggle the Address Book between the call types.
[Call History]	• Push to display the call history. (p. 3-6) • Push this key several times to toggle between the Call history types, Transmitted call, Received call, Sent message, Received message, Recording log, and Phone call log. • Hold down for 1 second to playback a selected Recording log. (p. 5-10)
[▲]/[▼]	Push to select a channel or scroll the screen.
[CLR/Lock]	• Push to return to the standby screen. • Hold down for 1 second to turn the Key Lock function ON or OFF. (p. 2-4) ⓘ [PTT], [Sub PTT], [VOL], [Emer], and the Monitor function are usable even while the Key Lock function is ON.
[FUNC]	• Push to display the Function screen. • In the function screen, push several times to select functions such as Operating mode selection, Talkgroup Selection, and so on*. *Selectable function may differ, depending on a Set mode setting.
[VOL]	• Rotate to turn the transceiver ON or OFF. • Rotate to adjust the audio output level.

Basic operation

◇ Selecting a call-to party

1. Push [Address] to display the Address book.
   ⓘ The Address book is displayed.
2. Push [Address] several times to toggle the call type.
   ⓘ The selectable call type may differ, depending on a presetting.
3. Rotate Rotary Selector or push [▲] or [▼] to select a call-to party.

◇ Receiving and transmitting

Receiving:
● When a Call is received, the Status indicator lights green.

Transmitting:
● While holding down [PTT], speak at your normal voice level.
   ⓘ The Status indicator lights red while [PTT] is pushed.

Talk while receiving a call:
● While receiving a call, push [PTT] to talk in the Full-Duplex mode* like a telephone call.
   ⓘ In the Full-Duplex mode, the Status indicator lights yellow.

* Usability depends on a presetting. Ask your dealer for details.

IMPORTANT:
To maximize the readability of your signal:
1. After pushing [PTT], pause briefly before you start speaking.
2. Hold the microphone 5 ~ 10 cm from your mouth, then speak at your normal voice level.

About the call type:

• All call:	Transmit to all of the transceivers that belong to the network.
• Group call:	Transmit to the transceivers that belong to the same group.
• Talkgroup call:	Transmit to the transceivers that belong to the same Talkgroup.
• Individual call:	Transmit to an individual transceiver.
• Telephone call:	Transmit to an IP phone. (Transmittable, depending on a presetting.)


About the Time-out Timer:
If continuous transmission exceeds the preset Time-Out Timer time, the transmission is cut off. Release [PTT], and then hold down again to resume talking.

Advanced operation

◇ About the Talkgroup Call

The Talkgroup Call function enables the user to communicate with call-to parties in the same Talkgroup.
For example, in the illustration below, when the transceiver “00105” in its normal group “10002” selects Talkgroup “20001,” it is excluded from group “10002,” and can communicate with only the transceivers “00004” and “00108” that belong to Talkgroup “20001.”

ⓘ This function can be used for only when the Talkgroup number is registered, and the Talkgroup Call function is assigned to a key by your dealer.
ⓘ Ask your dealer about whether or not to include the Talkgroup in the All Call.

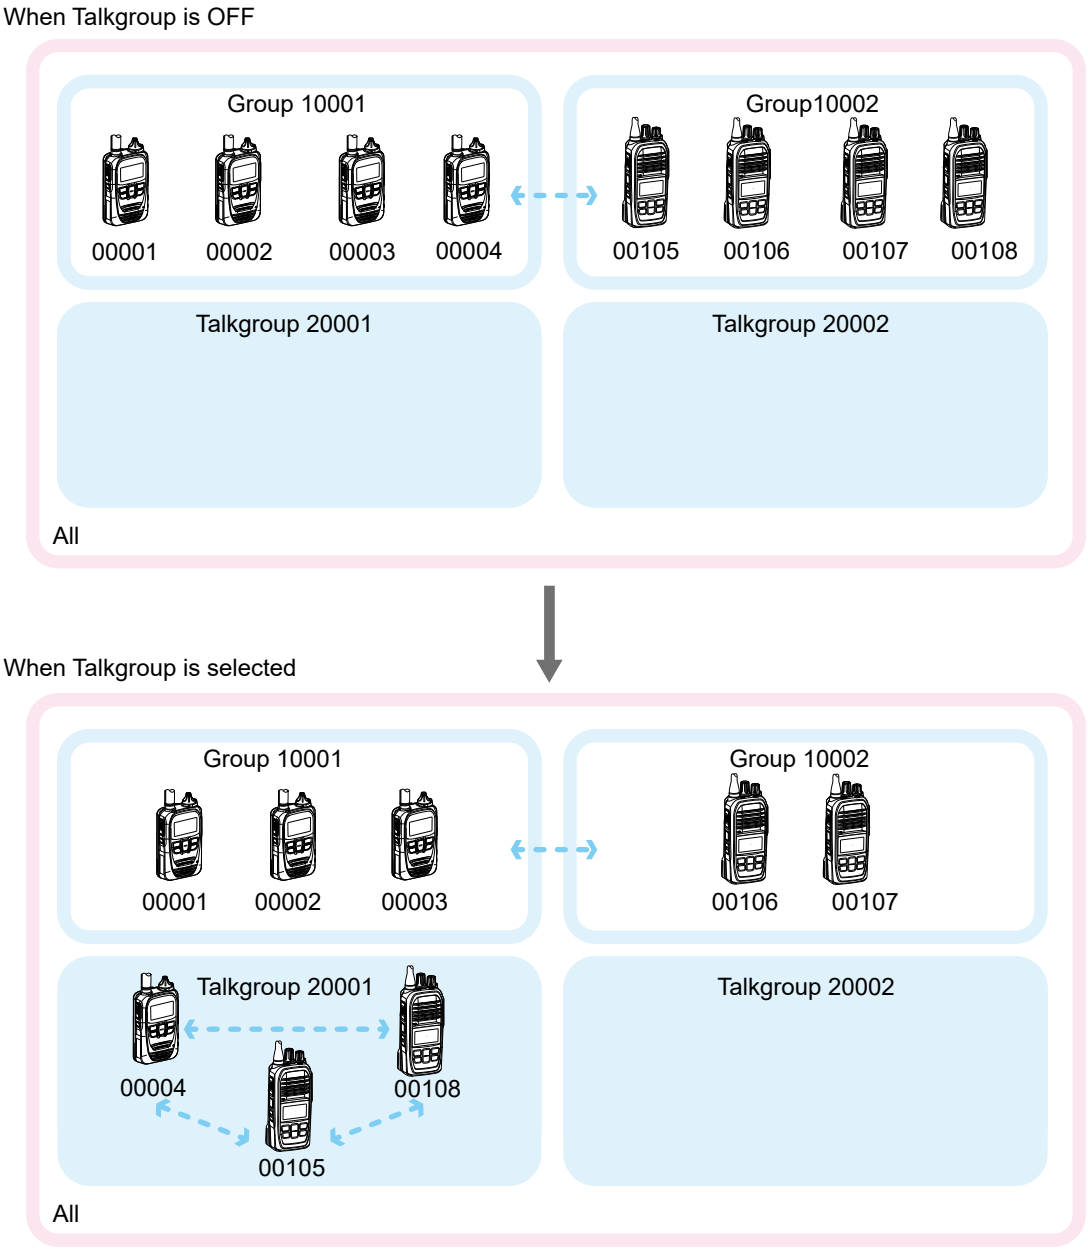


Advanced operation

◇ Selecting a Talkgroup number

You can select a Talkgroup number if the Talkgroup Call function is assigned to the [FUNC] key. Ask your dealer for details.

1. Push [FUNC] to display the Function.
   • The Function screen is displayed.
2. Push [FUNC] to display “Talkgroup,” if another function is displayed.
   ⓘ You may need to push [FUNC] several times, depending on a presetting.
3. Rotate Rotary Selector or push [▲] or [▼] to select a Talkgroup number that you want to belong.

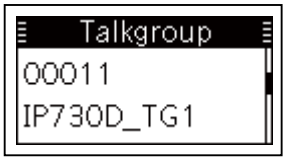

4. Push [CLR/Lock].
   • The transceiver is ready to talk to only the transceivers that belong to the same Talkgroup.
   ⓘ While the Talkgroup number is selected, you cannot transmit Normal Group call.
   ⓘ You can leave the Talkgroup and return to the Normal Group by selecting “OFF” in Step 3 on the “Talkgroup” screen.



Advanced operation


◇ Sending a message (Message Call)

You can send a message, depending on a presetting. Ask your dealer for details.

1. Selecting a call-to party

1. Push [Address] to display the Address book.
   • The Address book is displayed.
2. Push [Address] several times to toggle the call type.
   ⓘ Displayed call type may differ, depending on a presetting.

   All → Group → Individual → Telephone

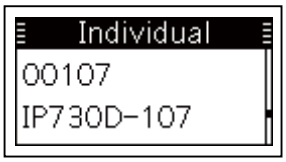


3. Rotate Rotary Selector or push [▲] or [▼] to select a call-to party.

> **TIP:** You can also select a call-to party from Call history.
> 1. Push [Call History] to display the Call history.
>   • The Call history is displayed.
> 2. Push [Call History] several times to toggle the Call history between “Tx log,” “Rx log,” and “TX MSG log.”
>   ⓘ The displayed log may differ, depending on a presetting.
>
>   Tx log → Rx log → Tx MSG log → Rx MSG log → Tx Call log → Rx Call log
>
> 3. Rotate Rotary Selector or push [▲] or [▼] to select a call-to party.

2. Sending a message

Sending a preset message:

1. Push [FUNC] to display the Function.
   • The Function screen is displayed.
2. Push [FUNC] to display “Message,” if another function is displayed.
   ⓘ You may need to push [FUNC] several times, depending on a presetting.
3. Rotate Rotary Selector or push [▲] or [▼] to select a message to send.
   • The selected message may scroll, depending on the message length.

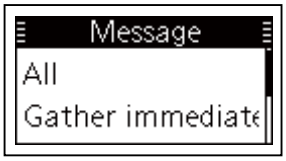

4. Push [PTT] to send a message.
   ⓘ “No Response” is displayed if the transmission failed.




Advanced operation

◇ Browsing received messages

You can browse received messages, depending on a presetting.
Ask your dealer for details.

1. Push [Call History] to display the Call history.
   • The Call history is displayed.
2. Push [Call History] to display “Rx MSG log.”
   ⓘ You may need to push [Call History] several times, depending on a presetting.
3. Rotate Rotary Selector or push [▲] or [▼] to browse received messages.
   ⓘ The selected message may scroll, depending on the message length.

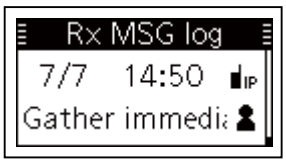

◇ Status Call

You can send a Status call depending on a presetting. Ask your dealer for details.

1. Push [FUNC] to display the Function.
   • The Function screen is displayed.
2. Push [FUNC] to display “Status,” if another function is displayed.
   ⓘ You may need to push [FUNC] several times, depending on a presetting.
3. Rotate Rotary Selector or push [▲] or [▼] to select a status.
4. Push [PTT] to send a status.




Advanced operation

◇ Toggling the SIM card


The transceiver has two SIM card slots, SIM 1 and SIM 2. You can toggle which SIM card to use in the Detailed Set mode.

1. Turn OFF the transceiver, if it is turned ON.
2. While holding down [Address] and [FUNC], rotate [VOL] to turn ON the transceiver.
   • The Detailed Set Mode is displayed.
   ⓘ Release the keys when “SET (Detail)” is displayed.

3. Rotate Rotary Selector or push [▲] or [▼] to select an item group “Cellular,” and then push [FUNC].

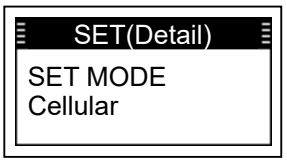

4. Push [Address] or [FUNC] several times to select “SIM Selection.”
5. Rotate Rotary Selector or push [▲] or [▼] to select a SIM card to use.
   ⓘ The SIM card name may be displayed, if it is entered.
6. Push [CLR/Lock] to exit “SIM Selection.”
   ⓘ Push [CLR/Lock] again to exit the Detailed Set mode and return to the Standby screen.

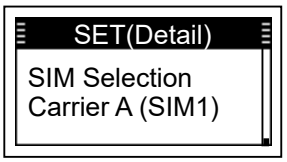

TIP: You can also push [FUNC] to display the “SIM Selection” screen by enabling the “Show SIM selection” in the Detailed Set mode (p. 6-10).

◇ Pocket Beep function

The Pocket Beep function sounds a notification tone and indication when a call is received.

ⓘ This function is set by your dealer, or in the Set mode.
ⓘ “” is displayed when the function is ON.
ⓘ “” blinks and the notification beep sounds when a call is received. It blinks until the transceiver returns to the standby mode after a received signal disappears.

◇ P-Bell function

The P-Bell function sounds the notification tone when a call is received.
A received call is muted until you reply. After pushing [PTT], the mute is released.


ⓘ This function is set by your dealer, or in the Set mode.
ⓘ “” is displayed when the function is ON.

Section 4 USING THE IDAS MODE

Basic operation....4-2
◇ Operating keys....4-2
◇ Selecting a Zone....4-3
◇ Selecting a channel....4-3
◇ Receiving and transmitting....4-3
◇ Transmitting Notes....4-3
Other functions....4-4
◇ Radio Access Number (RAN)....4-4
◇ Encryption function....4-4

Basic operation

◇ Operating keys

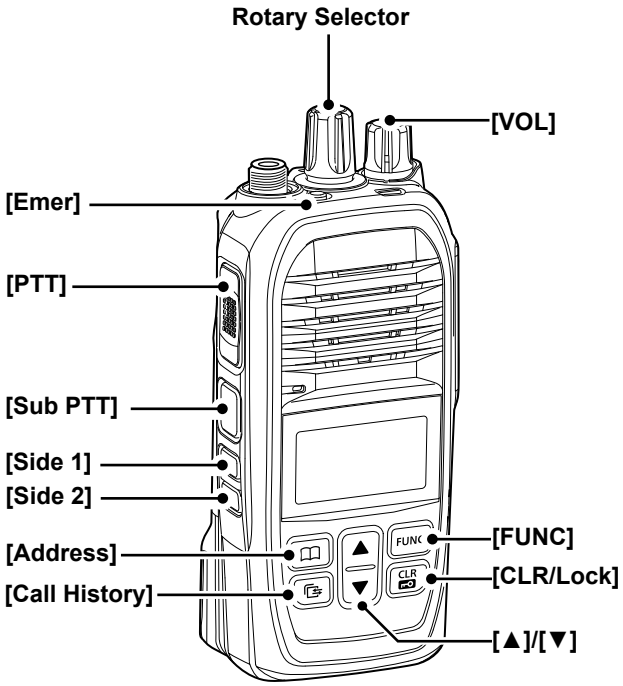

Rotary Selector	Rotate to select a channel or scroll the screen.
[Emer]	Hold down until “Emergency” is displayed to send an Emergency call. (p. 5-6)
[PTT]	Hold down to transmit, release to receive.
[Sub PTT] **[Side 1]** **[Side 2]**	Functions may be assigned, depending on a presetting. See page 5-11 for assignable function details. You can also assign functions in the Detailed Set mode. (p. 6-4)
[Address]	• Push to display the call-to party selection screen
[Call History]	• Push to display the call history. • Push this key several times to toggle between the Call history types, Transmitted call, Received call, and Recording Log. • Hold down for 1 second to playback a selected Recording log (p. 5-10).
[▲]/[▼]	Push to select a channel or scroll the screen.
[CLR/Lock]	• Push to return to the standby screen. • Hold down for 1 second to turn the Key Lock function ON or OFF. (p. 2-4) ⓘ [PTT], [Sub PTT], [VOL], [Emer], and the Monitor function are usable even while the Key Lock function is ON.
[FUNC]	• Push to display the Function screen. • In the function screen, push several times to select functions such as Operating mode selection, and so on*. *Selectable function may differ, depending on a Set mode setting.
[VOL]	• Rotate to turn ON or OFF the transceiver. • Rotate to adjust the audio output level.

Basic operation

◇ Selecting a Zone

Certain channels are grouped together and assigned to a Zone according to their intended use.
For example, Analog channels ‘Station 1’ and ‘Station 2’ are assigned to an “Analog” Zone, and Digital channels ‘Station 3’ and ‘Station 4’ are assigned to a “Digital” Zone.

ⓘ Confirm that the function to enter the Zone Selection screen is assigned to [Sub PTT], [Side 1], or [Side 2]. You can assign functions in the Detailed Set mode. See page 6-4 for details.

1. Push or hold down the key that is assigned for entering the Zone Selection screen.
2. Rotate Rotary Selector or push [▲] or [▼] select a zone.
3. Push [Call History] to exit the Zone Selection screen and return to the Standby Screen.

◇ Receiving and transmitting

Receiving:

1. Rotate Rotary selector, or push [▲] or [▼] to select a channel.
   • When a Call is received, the Status indicator lights green.

Transmitting:

CAUTION: DO NOT transmit without an antenna.

1. Wait until the channel is clear to avoid interference.
2. While holding down [PTT], speak at your normal voice level.
3. Release [PTT] to receive.

IMPORTANT:
To maximize the readability of your signal:
1. After pushing [PTT], pause briefly before you start speaking.
2. Hold the microphone 5 ~ 10 cm from your mouth, then speak at your normal voice level.

NOTE: You can only transmit at low power in the IDAS mode when using an optional BP-305 battery case and alkaline batteries.

◇ Transmitting Notes

❍Transmit Inhibit function
The transceiver has several inhibit functions which restrict transmission under the following conditions:

Lockout function:
The function inhibits transmission when the channel is busy. However, depending on a presetting, you can transmit when a call is received that includes a non-matching (or matching) CTCSS (DTCS), RAN (Radio Access Number), Individual ID, or Group ID.

Time-Out Timer:
If continuous transmission exceeds the preset Time-Out Timer time, the transmission is cut off. Release [PTT], and then hold down again to resume talking.

Penalty timer:
After the transmission is cut off by the Time-Out Timer, transmission is further inhibited for a preset penalty period of time.

Other functions

◇ Radio Access Number (RAN)

Radio Access Number (RAN) is a signaling system designed for digital radio communications. When a channel is set up with a RAN, the squelch will open only when a call containing a matching RAN* is received. If a call containing a different RAN is made on the same channel a user is using, a user will not hear the call.

*Depending on the settings, not only RAN but also individual ID or group ID must match.

◇ Encryption function

The Encryption function enables voice scrambling, which provides private digital communication between stations.
When an encrypted call is received, the audio is heard only when the call contains a matching Key ID and Encryption key.
If a call containing a different ID is made on the same channel, the squelch will not open, and the user will not hear the call.

- ⓘ This function is set by your dealer.
- ⓘ "" is displayed when the function is ON.
- ⓘ When the function is ON, push [PTT] to make an encrypted call.

Section 5 OTHER FUNCTIONS

Using a Bluetooth® device 5-2
◇ About the VS-3 Bluetooth headset 5-2
◇ Pairing with a Bluetooth device 5-3
◇ Settings for the Bluetooth function 5-3
◇ Disconnecting a paired device 5-4
◇ Deleting a Bluetooth device from the pairing list 5-4
◇ Initializing the Pairing lists 5-5
Using the Emergency call function 5-6
◇ The Man Down function 5-7
◇ The Lone Worker function 5-8
◇ The Stationary Detection function 5-9
◇ The Motion Detection function 5-9
Using the Voice Recorder function 5-10
◇ Using the Voice Recorder function 5-10
◇ Deleting the recorded audio 5-10
Using assignable keys 5-11
Using the Dual mode 5-12
◇ Main mode and Sub mode 5-12
◇ Transmitting 5-12


Using a Bluetooth® device

NOTE: Connect with a device that complies with the standards set by Bluetooth SIG and has been certified. Even if the device complies with the Bluetooth standard, it may not be able to connect to the transceiver, depending on the specifications and settings of the device, and not all operations are guaranteed.

The transceiver can operate with Bluetooth headsets.
ⓘ Only the VS-3 Bluetooth headset performance is guaranteed as of December 2025.

- The Bluetooth function may not be usable, depending on a presetting. Ask your dealer for details.
- The communication range of Bluetooth is approximately 10 m.
  ⓘ May vary, depending on the environment in which the device operates.
- Although you can enter up to 6 Bluetooth devices in the transceiver device list, it is recommended that you pair only one device at a time.


Electromagnetic Interference
When you use a Bluetooth device, pay attention to the following:
Bluetooth devices operate in the 2.4 GHz band that is also used by other appliances, such as Wireless LAN products, microwave ovens, RFID systems, amateur radio stations, and so on.
When using a Bluetooth device near such devices, interference may occur, causing a decrease in communication speed, and an unstable connection. In such case, keep the Bluetooth devices away from the other appliances, or stop using those devices.
Bringing the Bluetooth device and the transceiver closer together also improves communication.

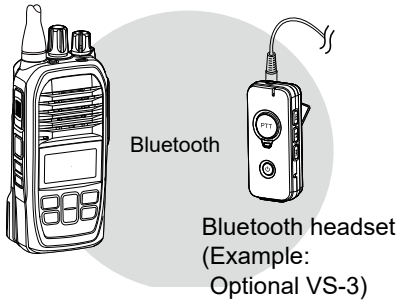


◇ About the VS-3 Bluetooth headset

When you connect an optional VS-3 Bluetooth headset to the transceiver, you can wirelessly transmit and receive the headset audio.
The VS-3 has a [PTT] switch, so you can transmit in the same way as using the transceiver's [PTT] switch.

- The [FWD], [RWD], and [PLAY] keys on the VS-3 are disabled while using the headset with the IP730D or IP740D.

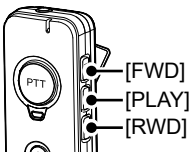

- If the headset does not work correctly, even if the power is ON, push [RESET] with a pin to force power OFF.

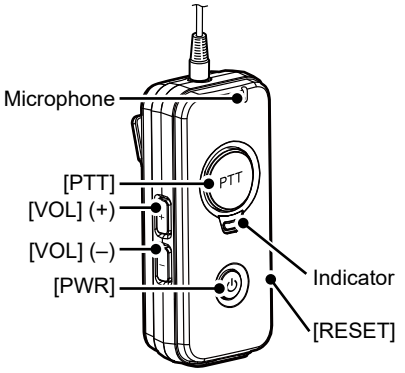

Function		Operation	Beep tone	Indicator
Bluetooth function	**ON**	Hold down [PWR] for 3 seconds	Melody (up)	Blinks blue
	OFF		Melody (down)	OFF
Pairing mode	**Searching**	While the Bluetooth function is OFF, hold down [PWR] for 6 seconds	PiPa- (ready to connect)	Quickly blinks red then blue, every 3 seconds
	Connected		PiRo	Blinks blue twice, every 3 seconds
Transmit*1		Push [PTT]	Pi*2	Blinks red once, then blue twice, every 3 seconds
Audio volume	**Up*1**	Push [VOL] (+)	Pi	–
	Down*1	Push [VOL] (–)	Boo	–

*1 Functional only when a Bluetooth device is connected.
*2 Depends on the Notice Tone settings or "BT PTT Beep" setting in the Set mode.

Using a Bluetooth® device

◇ Pairing with a Bluetooth device

This is an example of connecting the transceiver to a VS-3 Bluetooth headset.


1. Entering the VS-3 Pairing mode

1. Confirm the VS-3 is turned OFF.
2. Hold down [PWR] for 6 seconds.
   • The indicator quickly blinks red then blue, and then the headset enters the Pairing mode.

NOTE:
• Charge the VS-3 before operating.
• The VS-3 starts up in the Pairing mode when its Bluetooth function is ON, but no Bluetooth device is entered in its Pairing list.


2. Enable the transceiver's Bluetooth function

1. Turn OFF the transceiver, if it is turned ON.
2. While holding down [FUNC], rotate [VOL] to turn ON the transceiver.
   • The Set Mode is displayed.
   ⓘ Release [FUNC] when "SET MODE" is displayed.
3. Rotate Rotary Selector or push [▲] or [▼] to select an item group "Common," and then push [FUNC].
4. Push [FUNC] or [Address] several times to select "Bluetooth."
5. Rotate Rotary Selector or push [▲] or [▼] to select "ON."

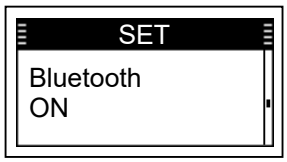


3. Pairing and connecting the Bluetooth device

1. Push [FUNC] several times to select "Search BT Device" in the Set mode, and then push [Call History].
   • The transceiver searches for a Bluetooth device.
   ⓘ Push [CLR/Lock] to cancel searching.
   • If found, the device's name and BD address are displayed on the screen.
   (Example: ICOM BT-002)

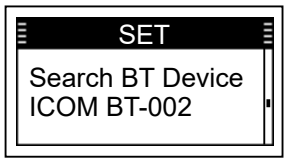

2. Push [▲] or [▼] to select the headset to pair and connect, and then push [Call History].
   • "Connect" is displayed when the pairing has completed.

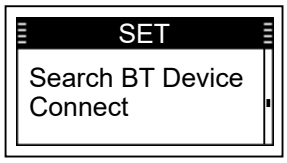

3. Push [CLR/Lock] to exit "Search BT Device."
   ⓘ Push [CLR/Lock] again to exit the Set mode and return to the Standby screen.
   • " " is displayed if the headset has correctly paired.

◇ Settings for the Bluetooth function

You can customize the transceiver's Bluetooth settings in the Set mode.
See the Set mode section for details.

Using a Bluetooth® device

◇ Disconnecting a paired device

You can disconnect a paired Bluetooth device if it is not being used.


1. In the standby screen, push [FUNC] several times to select “Pairing List.”
2. Push [▲] or [▼] to select the device to disconnect, and then push [Call History].
   • “Unconnected” is displayed if the headset or device is correctly disconnected.
   ⓘ Do the same steps to reconnect to the Bluetooth device.



◇ Deleting a Bluetooth device from the pairing list

You can delete Bluetooth devices from the “Pairing List” screen.
ⓘ Disconnect the Bluetooth device before deleting if connected.

1. Turn OFF the transceiver, if it is turned ON.
2. While holding down [FUNC], rotate [VOL] to turn ON the transceiver.
   • The Set Mode is displayed.
   ⓘ Release [FUNC] when “SET” is displayed.
3. Rotate Rotary Selector or push [▲] or [▼] to select an item group “Common,” and then push [FUNC].
4. Push [FUNC] or [Address] several times to select “Delete BT Device.”
5. Rotate Rotary Selector or push [▲] or [▼] to select the device to delete.
6. Push [Call history].
   • “Delete?” is displayed.
   • To cancel deleting, push any key other than [Call history].
7. Push [Call history].
   • “Completed to delete” is displayed, and the selected device is deleted from the pairing list.

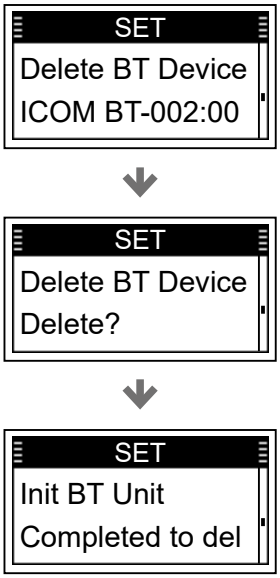

Using a Bluetooth® device


◇ Initializing the Pairing lists

If you have problems with Bluetooth operation, initialize the pairing lists, as shown below.

Initializing the Pairing list of the transceiver

ⓘ All the paired Bluetooth devices are deleted from the Pairing list by the initialization.
ⓘ The Pairing list is not initialized by the RESET function in the Detailed Set mode.

1. Turn OFF the transceiver, if it is turned ON.
2. While holding down [FUNC], rotate [VOL] to turn ON the transceiver.
   • The Set Mode is displayed.
   ⓘ Release [FUNC] when “SET MODE” is displayed.
3. Rotate Rotary Selector or push [▲] or [▼] to select an item group “Common,” and then push [FUNC].
4. Push [FUNC] or [Address] several times to select “Init BT Unit.”
5. Rotate Rotary Selector or push [▲] or [▼] to select “Clear.”
6. Push [Call History] to initialize the Pairing Lists.
   • The pairing list is initialized, and the transceiver automatically restarts.

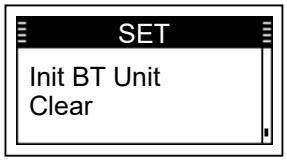

Initializing the Pairing list of the VS-3

1. Hold down [PWR] on the VS-3 for 3 seconds, to turn ON the Bluetooth function.
   • The indicator blinks blue.
2. Hold down [PWR] on the VS-3 for 3 seconds again, to turn OFF the Bluetooth function.
   • The indicator turns OFF.
3. Within 10 seconds, while holding down both [VOL] (+) and [VOL] (–), hold down [PWR] for 10 seconds.
   • The indicator lights violet, then turns OFF after the pairing list is initialized.

Using the Emergency call function

You can receive or transmit Emergency Call if the function is enabled.

Transmitting:
The instruction is for when the function is enabled. Ask your dealer for details.

1. Hold down [Emer] until “Emergency” is displayed.
   • An alarm periodically sounds.
   ⓘ If the Surveillance function is enabled, no alarm sounds.
2. Wait for an answer-back.
   • When the transceiver receives an answer-back, the alarm stops, and the Status indicator lights green.
   ⓘ Turn OFF the transceiver to cancel the emergency call.
   ⓘ The transceiver automatically transmits a repeat Emergency call until it receives an acknowledgement, or until a user turns OFF the transceiver.



Receiving:
1. “Emergency” is displayed and the alarm periodically sounds.
   ⓘ If the Surveillance function is enabled, no alarm sounds.
2. While holding down [PTT], talk into the microphone.
   • While holding down [PTT], the Status indicator lights red.
   • The alarm stops.
   • Returns to the Standby screen when you release [PTT].



NOTE: The Emergency function may not properly work, depending on the surrounding environment such as obstructions, weather condition, and so on. Icom is not responsible for the destruction or damage caused by using the Emergency Call function.


Using the Emergency Call function

The transceiver enters the Emergency mode through the following functions, depending on a presetting:

◇ The Man Down function

When the transceiver is tilted past the preset angle for the ON Timer preset time, the transceiver enters the Emergency mode.


ⓘ If a user raises the transceiver back from the preset angle towards the vertical position before the Reminder Timer set time expires, the Emergency mode is canceled.

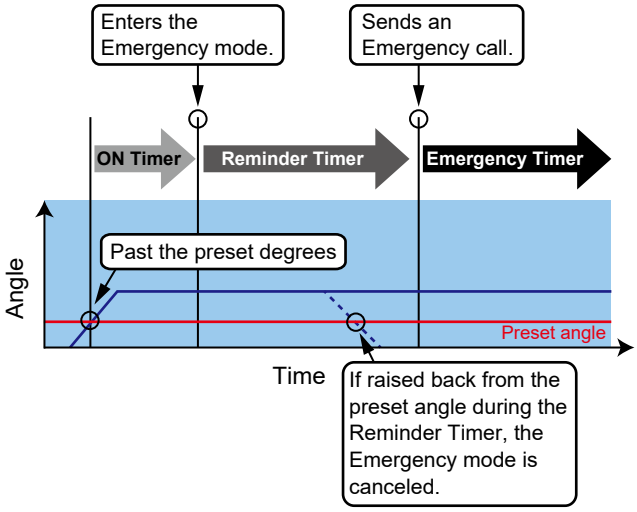

Man Down With Stationary:

- The transceiver leans past the preset angle for the ON Timer preset time.
  AND
- The transceiver is detected as stationary (no motion) for the ON Timer set time.

ⓘ If a user raises the transceiver back from the preset angle towards the vertical position, or when the user moves the transceiver before the Reminder Timer set time expires, the Emergency mode is canceled.

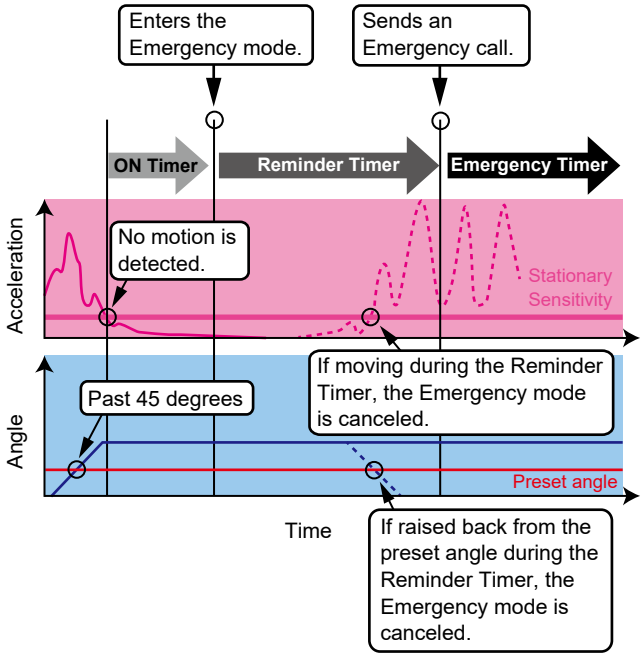

NOTE: The Man down function may not properly work, depending on the surrounding environment such as obstructions, weather condition, and so on.
Icom is not responsible for the destruction or damage caused by using the Man Down function.


Using the Emergency Call function

The transceiver enters the Emergency mode through the following functions, depending on a presetting:

◇ The Lone Worker function

When no operation occurs for the ON Timer preset time.

ⓘ If a user pushes any key before the Reminder Timer set time expires, the Emergency mode is canceled.

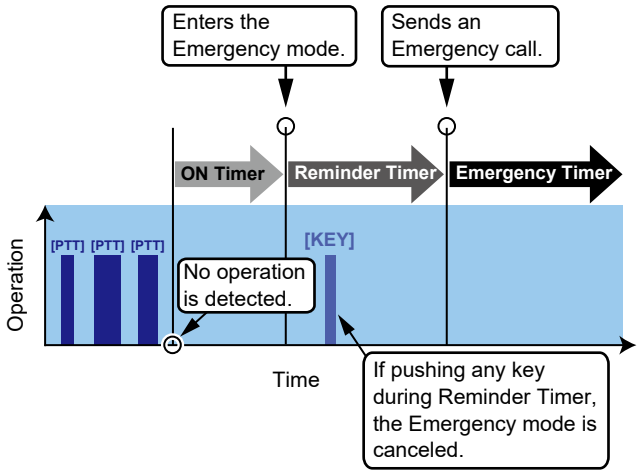


Lone Worker With Stationary:

- When no operation occurs for the ON Timer preset time.
  AND
- The transceiver is detected as stationary (no motion) for the ON Timer set time.

ⓘ If a user pushes any key, or moves the transceiver before the Reminder Timer set time expires, the Emergency mode is canceled.

Example:

- ON Timer: 60 minutes
- Reminder Timer: 60 seconds

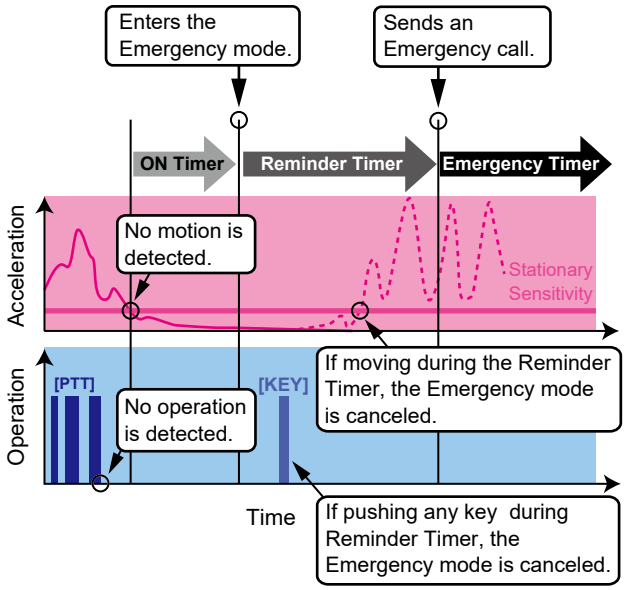

NOTE: The Lone Worker function may not properly work, depending on the surrounding environment such as obstructions, weather condition, and so on.
Icom is not responsible for the destruction or damage caused by using the Lone Worker function.


Using the Emergency Call function

The transceiver enters the Emergency mode through the following functions, depending on a presetting:

◇ The Stationary Detection function

When the transceiver is detected as being stationary (no motion) for the ON Timer preset time.

ⓘ If a user moves the transceiver during the Reminder Timer set time, the Emergency mode is canceled.

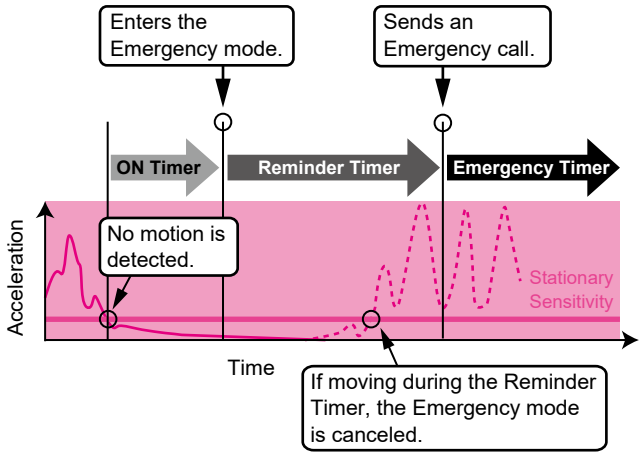


NOTE: The Stationary Detection function may not properly work, depending on the surrounding environment such as obstructions, weather condition, and so on.
Icom is not responsible for the destruction or damage caused by using the Stationary Detection function.

◇ The Motion Detection function

When the transceiver continuously moves for the ON Timer preset time.

ⓘ If a user holds down [Emer] for the Emer SW OFF Timer (Sec) set time, before the Reminder Timer set time expires, the Emergency mode is canceled.

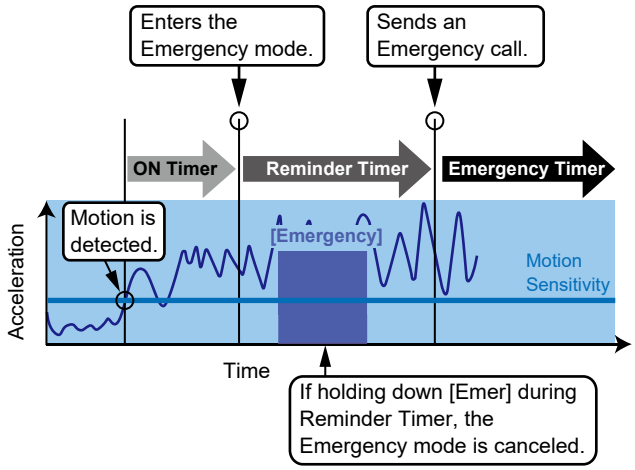

NOTE: The Motion Detection function may not properly work, depending on the surrounding environment such as obstructions, weather condition, and so on.
Icom is not responsible for the destruction or damage caused by using the Motion Detection function.

Using the Voice Recorder function


The transceiver can record and playback up to 10 of the latest incoming calls, depending on a presetting.

ⓘ Records up to 4 minutes per call. If a call is longer than 4 minutes, the older will be automatically deleted.
ⓘ The recordable call type may differ, depending on a presetting.
ⓘ A recorded audio data cannot be exported.
ⓘ This function does not record analog audio.

◇ Using the Voice Recorder function

1. Enable the Voice Recorder function

1. Turn OFF the transceiver, if it is turned ON.
2. While holding down [FUNC], rotate [VOL] to turn ON the transceiver.
   • The Set Mode is displayed.
   ⓘ Release [FUNC] when “SET MODE” is displayed.
3. Rotate Rotary Selector or push [▲] or [▼] to select an item group “Common,” and then push [FUNC].
4. Push [FUNC] or [Address] several times to select “Recording.”
5. Rotate Rotary Selector or push [▲] or [▼] to select “ON.”
6. Push [CLR/Lock] to exit “Recording.”
   ⓘ Push [CLR/Lock] again to exit the Set mode and return to the Standby screen.

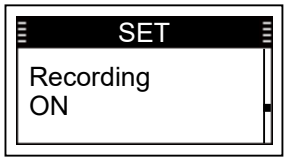

2. Turning ON the Voice Recorder function


1. Push [FUNC] to display the Function.
   • The Function screen is displayed.
2. Push [FUNC] to display “Recording,” if another function is displayed.
   ⓘ You may need to push [FUNC] several times, depending on a presetting.
3. Rotate Rotary Selector or push [▲] or [▼] to select “ON.”
4. Push [CLR/Lock] to return to the Standby screen.
   • “ ” is displayed.



3. Playing back the recorded audio

“ ” blinks in the Standby Screen if there is recorded audio that has not been played back.


1. Push [Call History] to display the Function.
   • The Call History is displayed.
2. Push [Call History] several times to toggle the Call history from “Tx log,” “Rx log,” “TX MSG log,” “RX MSG log,” or “Recording Log.”
   ⓘ Displayed log may differ, depending on a presetting.
3. Rotate Rotary Selector or push [▲] or [▼] to select an audio to playback.



4. Hold down [Call History] for 1 second to playback the audio.
   ⓘ Push [▲] or [▼] to stop playing back the audio.


◇ Deleting the recorded audio

1. Turn OFF the transceiver, if it is turned ON.
2. While holding down [FUNC], rotate [VOL] to turn ON the transceiver.
   • The Set Mode is displayed.
   ⓘ Release [FUNC] when “SET MODE” is displayed.
3. Rotate Rotary Selector or push [▲] or [▼] to select an item group “Common,” and then push [FUNC].
4. Push [FUNC] or [Address] several times to select “Delete Recording.”
5. Rotate Rotary Selector or push [▲] or [▼] to select “Clear.”
6. Push [Call History] to delete the recorded audio.
7. Push [CLR/Lock] to exit “Delete Recording.”
   ⓘ Push [CLR/Lock] again to exit the Set mode and return to the Standby screen.

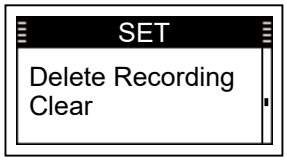

Using assignable keys

Functions shown below may be assigned to the [Sub PTT], [Side 1], and [Side 2] keys, depending on a presetting. Hold down or push these keys to use assigned functions.
You can also assign these functions in the Detailed Set mode (p. 6-4).

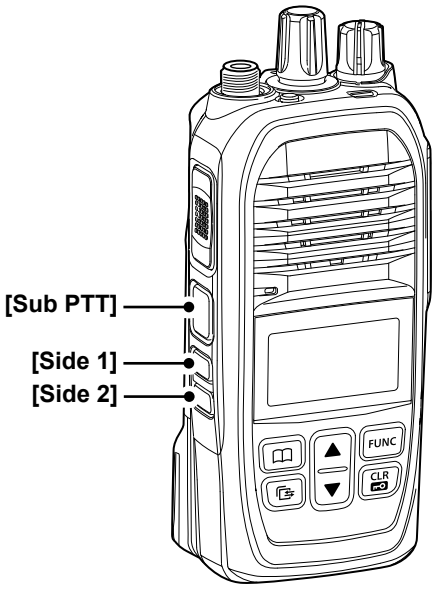


Function	Descriptions
Zone	Enter the Zone* Selection screen. *Certain channels are grouped together and assigned to a Zone according to their intended use. For example, Analog channels 'Station 1' and 'Station 2' are assigned to an "Analog" Zone, and Digital channels 'Station 3' and 'Station 4' are assigned to a "Digital" Zone.
Monitor	Turn ON the monitor function. The function turns the squelch mute or the CTCSS (DTCS) squelch mute ON or OFF.
Talk Around	Turn ON the Talk Around function. The function equalizes the transmit frequency to the receive frequency, for direct (Simplex) communication.
Message	Push to directly display the Message screen. ⓘ The Message screen displayed by the first push differs depending on a presetting.
One Touch	Push to directly select particular call-to party. ⓘ The selectable call-to party differs depending on a presetting.
Surveillance	Turn ON the Surveillance function. When this function is turned ON, the beep is not heard and the backlight and the Status indicator do not light, even when a signal is received, or a key is pushed.
AquaQuake™	While holding down this key, the AquaQuake water draining function removes water from the speaker grill by vibrating the internal speaker. ⓘ Water in the speaker grill may muffle the sound coming from the speaker. ⓘ After the specified period of time, this function automatically stops, even if a user continues to hold down this key. ⓘ This key works with only the internal speaker.

Using the Dual mode

You can use the Cellular mode and IDAS mode at the same time.

◇ Main mode and Sub mode

When the Dual mode is selected, the Main mode and Sub mode are displayed as shown to the right.

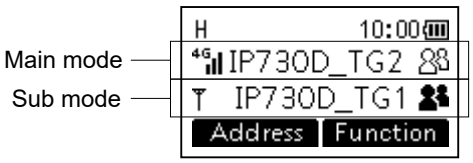

Switching the operating mode:

- Hold down [FUNC] for 1 second to toggle the Main mode and Sub mode.

ⓘ May not be usable, or turning ON the Main/Sub SW function in the Set mode may be required, depending on the presetting.

◇ Transmitting

- Hold down [PTT] to transmit in the Main mode.
- Hold down [Sub PTT] to transmit in the Sub mode.

ⓘ You can also simultaneously transmit* in both modes by holding down both [PTT] and [Sub PTT].
*The Status indicator lights yellow.

ⓘ A channel, call-to party, or call type may not be selectable in the Sub mode, depending on the presetting. In that case, switch to the Main mode, and then select a channel, call-to party, or call type.

NOTE: Functions shown below are not usable in the Dual mode.
• Sending or receiving a message
• VOX function
• P-Bell function

Section 6 SET MODE


Using the Set mode 6-2
◇ Basic Set mode 6-2
◇ Detailed Set mode 6-2
◇ Using the Set mode 6-2
Set mode items 6-3
◇ Common 6-3
◇ Dual 6-8
◇ Cellular 6-9
◇ IDAS 6-11

Using the Set mode

You can use the Set mode to set infrequently changed values or function settings.
The transceiver has 2 types of Set modes, as shown below.
ⓘ You cannot transmit or receive while the transceiver is in the Set mode.


◇ Basic Set mode

1. Turn OFF the transceiver, if it is turned ON.
2. While holding down [FUNC], rotate [VOL] to turn ON the transceiver.
   • The Set mode is displayed.
   ⓘ Release [FUNC] when “SET” is displayed.
3. Rotate Rotary Selector or push [▲] or [▼] to select an item group “Common,” “Dual,” “Cellular,” or “IDAS,” and then push [FUNC].
   ⓘ Select “Certification” and then push [FUNC] to display certification information.

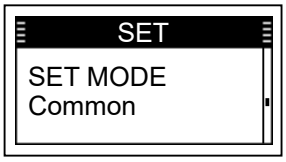

◇ Detailed Set mode


1. Turn OFF the transceiver, if it is turned ON.
2. While holding down [FUNC] and [Address], rotate [VOL] to turn ON the transceiver.
   • The Detailed Set mode is displayed.
   ⓘ Release [FUNC] when “SET (Detail)” is displayed.
3. Rotate Rotary Selector or push [▲] or [▼] to select an item group “Common,” “Dual,” “Cellular,” or “IDAS,” and then push [FUNC].

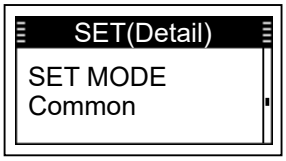

◇ Using the Set mode

Example: Disabling the key touch beep.

1. Turn OFF the transceiver, if it is turned ON.
2. While holding down [FUNC] and [Address], rotate [VOL] to turn ON the transceiver.
   • The Detailed Set mode is displayed.
   ⓘ Release [FUNC] when “SET (Detail)” is displayed.
3. Rotate Rotary Selector or push [▲] or [▼] to select an item group “Common,” and then push [FUNC].
4. Push [FUNC] or [Address] several times to select “Key-Touch Beep.”
5. Rotate Rotary Selector or push [▲] or [▼] to select “OFF.”
6. Push [CLR/Lock] to exit “Key-Touch Beep.”
   ⓘ Push [CLR/Lock] again to exit the Set mode and return to the Standby screen.

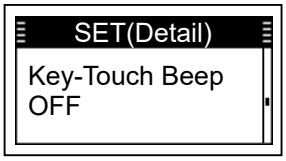

Set mode items

The shaded items are also displayed in the Basic Set mode.
ⓘ Items or default values may differ, depending on the transceiver's version or presettings. Ask your dealer for details.

◇ Common

Item	Description	Option/range	Default
LOG CLEAR	Deletes logs. ⓘ Select "Clear," and then push [Call History] to delete.	– – –, Clear	– – –
FIRM UP	Updates the transceiver's firmware. ⓘ Select "YES," and then push [Call History] to update the firmware. ⓘ The transceiver automatically restarts. ⓘ Updating the firmware takes approximately 10 minutes.	NO or YES	NO
RX Notify Vol.	Sets the call or message received notification volume.	0 ~ 32	10
Notify Vol.	Sets the Notification Beep level.	0 ~ 32	10
Key-Touch Beep	Selects whether or not to enable the Key-touch beep.	ON or OFF	ON
Key-Touch Beep Vol.	Sets the beep level when a transceiver's key is pushed.	0 ~ 32	3
Key-Touch Beep Linked	Selects whether or not to link the Key Touch Beep level to the transceiver's setting.	ON or OFF	ON
Internal Mic Gain	Sets the internal microphone sensitivity. ⓘ Higher values make the microphone more sensitive to your voice.	–12 dB ~ 12 dB (in 4 dB step)	0 dB
External Mic Gain	Sets the external microphone sensitivity. ⓘ Higher values make the microphone more sensitive to your voice.	–12 dB ~ 12 dB (in 4 dB step)	0 dB
VOX	Selects whether or not to use the VOX function. The function automatically switches between receive and transmit by detecting your voice.	OFF, Bluetooth Mic, or Earphone Mic/Headset	OFF
VOX Threshold*1	Sets the VOX gain level. ⓘ Lower values make the VOX function more sensitive to your voice.	1 ~ 10	5
VOX Delay*1	Sets the period of time the transceiver continues transmitting after the user stops speaking, and then the VOX switches to receive. ⓘ If you set the time too short, a pause in a conversation may be regarded as the end of conversation, and the transceiver will start receiving, even as the conversation continues.	0.5 ~ 3.0	1.0

*1 Displayed only when "Bluetooth Mic," or "Earphone Mic/Headset" is selected in the "VOX" item.

Set mode items

The shaded items are also displayed in the Basic Set mode.
ⓘ Items or default values may differ, depending on the transceiver's version or presettings. Ask your dealer for details.

◇ Common

Item	Description	Option/range	Default
Man Down*2	Selects whether or not to enable the Man Down function. The transceiver enters the Emergency mode when it is tilted past the preset angle for a certain time. (p. 5-7)	OFF or ON	OFF
Lone Worker*2	Selects whether or not to enable the Lone Worker function. The transceiver enters the Emergency mode when no operation occurs for a certain time. (p. 5-8)	OFF or ON	OFF
Stationary Detection*2	Selects whether or not to enable the Stationary Detection function. The transceiver enters the Emergency mode when it is detected as being stationary (no motion) for a certain time. (p. 5-9)	OFF or ON	OFF
Motion Detection*2	Selects whether or not to enable the Motion Detection function. The transceiver enters the Emergency mode when it is continuously moves for a certain time. (p. 5-9)	OFF or ON	OFF
Recording	Selects whether or not to enable the Voice Recorder function. (p. 5-10)	OFF or ON	OFF
Record Call type*3	Selects a type of call to record.	Individual Call or All	Individual Call
Delete Recording*3	Deletes recorded audio. ⓘ Select "Clear," and then push [Call History] to delete.	– – – or Clear	– – –
Noise Canceller	Selects whether or not to enable the Noise Cancelling function.	ON or OFF	ON
PTT Lock	Selects whether or not to enable the PTT function. The function inhibits transmission by the internal PTT.	OFF or ON	OFF
Operate Inhibit	Selects whether or not to inhibit the operation except using [VOL].	OFF or ON	OFF
Sub PTT Push*4	Sets the function to execute when you push [Sub PTT].	Null, Zone, Monitor, Talk Around, Message, One Touch, or Surveillance	Null
Sub PTT Hold*4	Sets the function to execute when you hold down [Sub PTT].	Null, Zone, Monitor, Talk Around, Message, One Touch, Surveillance, or AquaQuake	Null

*2 Displayed only when the Emergency Call function is enabled by your dealer.
*3 Displayed only when "ON" is selected in the "Recording" item.
*4 In Dual mode, transmits in Sub mode regardless of the setting.

Set mode items

The shaded items are also displayed in the Basic Set mode.
ⓘ Items or default values may differ, depending on the transceiver's version or presettings. Ask your dealer for details.

◇ Common

Item	Description	Option/range	Default
Side 1 Push	Sets the function to execute when you push [Side 1].	Null, Zone, Monitor, Talk Around, Message, One Touch, or Surveillance	Null
Side 1 Hold	Sets the function to execute when you hold down [Side 1].	Null, Zone, Monitor, Talk Around, Message, One Touch, Surveillance, or AquaQuake	Null
Side 2 Push	Sets the function to execute when you push [Side 2].	Null, Zone, Monitor, Talk Around, Message, One Touch, or Surveillance	Null
Side 2 Hold	Sets the function to execute when you hold down [Side 2].	Null, Zone, Monitor, Talk Around, Message, One Touch, Surveillance, or AquaQuake	Null
Auto Key Lock	Selects the period of time until the Key Lock function is turned ON. The Key Lock function will automatically be turned ON after no key has been operated during the set period of time.	OFF, 15, 30 seconds, 1, 3, 5, 10 minutes	OFF
Backlight	Selects a Backlight option.	Auto, ON, or OFF	Auto
Brightness	Selects a Backlight brightness option.	Light or Dark	Light
Contrast	Sets the screen contrast.	1 ~ 16	8
AF Min Level	Sets the minimum audio output level.	0 ~ 32	0
AF Max Level	Sets the maximum audio output level.	0 ~ 32	32
Bluetooth	Selects whether or not to enable the Bluetooth function. (p. 5-2)	OFF or ON	OFF
BT Auto Connect*5	Selects whether or not to automatically connect a Bluetooth device.	OFF or ON	ON
BT Sync Vol.*5	Selects whether or not to synchronize the Bluetooth headset's volume level with the transceiver's volume level. ⓘ When "ON" is selected, the Bluetooth headset volume can be set by rotating [VOL].	OFF or ON	OFF
BT Connect Type*5	Selects the Synchronous Connection-Oriented (SCO) link* connection type of a Bluetooth headset. When "Auto Disconnect" is selected, the SCO link is automatically disconnected after 2 seconds. *A Bluetooth link for voice communication. ⓘ This setting is valid only when a Bluetooth device other than a VS-3 is used. ⓘ When this item is set to "Auto Disconnect," the VOX function is not usable.	Always Connect or Auto Disconnect	Always Connect

*5 Displayed only when "ON" is selected in the "Bluetooth" item.

Set mode items

The shaded items are also displayed in the Basic Set mode.
ⓘ Items or default values may differ, depending on the transceiver's version or presettings. Ask your dealer for details.

◇ Common

Item	Description	Option/range	Default
BT PTT & Mic Switch*5	Enables the user to select which microphone to use. ⓘ When this item is set to "Auto," transmits the audio from the device whose [PTT] is pushed.	Auto, Bluetooth Mic, or Radio Mic	Auto
BT AF Output*5	Selects the AF Output device when a Bluetooth headset is connected.	BT Only or BT & SP	BT Only
BT Mic Gain*5	Sets the Bluetooth microphone sensitivity. ⓘ Higher values make the microphone more sensitive to your voice.	–12 dB ~ 12 dB (in 4 dB step)	0 dB
BT Echo Canceller*5	Selects whether or not to enable the Bluetooth headset's Echo Canceller.	ON or OFF	ON
BT E-Cancel Gain*5	Sets the Echo Canceller input gain for a Bluetooth headset.	–40 dB ~ 40 dB	0 dB
BT E-Cancel Delay*5	Sets the Echo Canceller delay for a Bluetooth headset.	0 milliseconds ~ 160 milliseconds	70 milliseconds
BT Noise Cancel*5	Selects whether or not to enable the Bluetooth headset's Noise Canceller.	ON or OFF	ON
BT Power Save*5	Selects whether or not to enable the Bluetooth headset's Power Save function. ⓘ When "ON" is selected, the Power Save function automatically activates after 2 minutes of no communication.	OFF or ON	OFF
BT One Touch PTT*5	Selects whether or not to enable the One-Touch PTT function while a Bluetooth headset is connected. The function toggles receiving and transmitting by momentarily pushing [PTT] on a Bluetooth headset. ⓘ Push [PTT] to talk, and push again to return to receive. ⓘ When "ON" is selected, you do not have to hold down [PTT] while you are talking.	OFF or ON	OFF
Show BT One Touch PTT*5	Selects whether or not to display the "BT One Touch PTT" item by pushing [FUNC] on the standby screen.	OFF or ON	OFF
BT PTT Beep*5	Selects whether or not to sound a beep when the [PTT] on the Bluetooth headset is pushed.	OFF or ON	OFF
Search BT Device*5	Searches for Bluetooth devices. ⓘ Push [Call History] to start searching.	Search	Search
Delete BT Device*5	Deletes paired devices.	–	No Device

*5 Displayed only when "ON" is selected in the "Bluetooth" item.

Set mode items

The shaded items are also displayed in the Basic Set mode.
ⓘ Items or default values may differ, depending on the transceiver's version or presettings. Ask your dealer for details.

◇ Common

Item	Description	Option/range	Default
Init BT Unit*5	Initializes the built-in Bluetooth unit and pairing list.	– – – or Clear	– – –
BT Unit Version	Displays the built-in Bluetooth unit version.	–	–
RESET	Resets the transceiver to its defaults, except for the Bluetooth pairing list. ⓘ Select "Run," and then push [Call History] to reset. ⓘ The transceiver automatically restarts.	NO or YES	NO

*5 Displayed only when "ON" is selected in the "Bluetooth" item.

Set mode items

The shaded items are also displayed in the Basic Set mode.
ⓘ Items or default values may differ, depending on the transceiver's version or presettings. Ask your dealer for details.

◇ Dual

Item	Description	Option/range	Default
Cellular Call Tone	Selects a notice tone for a call in the Cellular mode.	Tone1 ~ Tone8	Tone 1
IDAS Call Tone	Selects a notice tone for a call in the IDAS mode.	Tone1 ~ Tone8	Tone 1
Cellular Crtsy Beep	Selects a notice tone when a call in the Cellular mode is completed.	OFF, Tone1 ~ Tone8	Tone 1
IDAS Crtsy Beep	Selects a notice tone when a call in the IDAS mode is completed.	OFF, Tone1 ~ Tone8	Tone 1
Cellular RX Tone	Selects a notice tone when a call is received in the Cellular mode.	OFF, Tone1 ~ Tone8	OFF
IDAS RX Tone	Selects a notice tone when a call is received in the IDAS mode.	OFF, Tone1 ~ Tone8	OFF
Cellular Notify No.*6	Selects the number of notifications in the Cellular mode.	Continuous, 1, 3, 10, or 20	3
IDAS Notify No.*7	Selects the number of notifications in the IDAS mode.	Continuous, 1, 3, 10, or 20	3
RX Notify Actn.	Selects the action when the transceiver receives a Call or message.	Beep, Vibration, or Beep + Vibration	Beep
Main/Sub SW	Selects whether or not to switch the main operation mode and sub operation mode by holding down [FUNC].	ON or OFF	ON

*6 Displayed only when any tone number is set in the "Cellular RX Tone" item.
*7 Displayed only when any tone number is set in the "IDAS RX Tone" item.

Set mode items

The shaded items are also displayed in the Basic Set mode.
ⓘ Items or default values may differ, depending on the transceiver's version or presettings. Ask your dealer for details.

◇ Cellular

Item	Description	Option/range	Default
Success Tone	Selects whether or not to enable the tone that indicates an individual call was successfully transmitted. ⓘ The transmission result is also displayed on the screen.	ON or OFF	ON
Failure Tone	Selects whether or not to enable the tone that indicates an individual call failed. ⓘ The transmission result is also displayed on the screen.	ON or OFF	ON
Call Tone (IND/ GRP/ALL/ TEL)	Sets the call Initiation tone.	OFF, Tone1 ~ Tone8 ⓘ Larger number makes the tone lower.	Tone1 (Pi)
Crtsy Beep (IND/GRP/ALL/ TEL)	Sets the call Termination beep.	OFF, Tone1 ~ Tone8 ⓘ Larger number makes the tone lower.	Tone1 (Pi)
RX Tone (IND/GRP/ALL/ TEL/MSG)	Sets the call Receive tone.	OFF, Tone1 ~ Tone8 ⓘ Larger number makes the tone lower.	OFF
Notify Type (IND/GRP/ALL/ TEL)	Sets the call receive notification type.	P-Bell or Pocket beep	P-Bell
Notify No. (IND/GRP/ALL/ TEL/MSG)	Sets the number of tones.	Continuous (Except for "MSG"), 1, 3, 10, 20 (times)	3 (times)
RX Notify Actn.	Sets the call or message receive notification type.	Tone, Vibration, or Tone + Vibration	Tone
Out of Rng Tone	Selects whether or not to enable the Out-of-Area Warning Beep. The beep also sounds when the transceiver reenters the service area.	OFF or ON	OFF
Range Side Tone	Selects whether or not to mute the Side Tone when the transceiver is out-of-area.	OFF or ON	OFF
Sidetone	Selects whether or not to output your voice to a headset that is connected to the transceiver. ⓘ The function outputs your voice even if you are not holding down [PTT], depending on the attached microphone. (p. 7-5)	OFF or ON	OFF
Sidetone Volume*8	Sets the Side tone volume.	0 ~ 32	10

*8 Displayed only when "ON" is selected in the "Sidetone" item.

Set mode items

The shaded items are also displayed in the Basic Set mode.
ⓘ Items or default values may differ, depending on the transceiver's version or presettings. Ask your dealer for details.

◇ Cellular

Item	Description	Option/range	Default
Echo Canceller	Selects whether or not to enable the Echo Cancelling function. ⓘ Commonly used for an earphone MIC, and headset. ⓘ This function is not usable when the "Sidetone" is set to "ON."	ON or OFF	ON
RX Buffer Type	Sets the Jitter buffer size. ⓘ Jitter buffer reduces audio interruptions.	Dynamic, 40 ~ 480 milliseconds (in 40 milliseconds step)	Dynamic
Call Type Stnby	Selects whether or not to display the call-to party (Call type)* on the standby screen. *Preset by your dealer.	ON or OFF	ON
One Touch PTT	Selects whether or not to enable the One-Touch PTT function. The function toggles receiving and transmitting by momentarily pushing [PTT]. ⓘ Push [PTT] to talk, and push again to return to receive. ⓘ When "ON" is selected, you do not have to hold down [PTT] while you are talking.	OFF or ON	OFF
Destination ID	Selects a Destination ID display option. ⓘ If "OFF" is selected, the call-to party (call type) that is preset by your dealer is displayed on the standby screen.	OFF, All Operations, Transmit and Receive, or Transmit	OFF
Show SIM Selection	Selects whether or not to display the "SIM Selection" item by pushing [FUNC] on the standby screen.	ON or OFF	ON
SIM Selection	Selects a SIM card. (p. 3-8) ⓘ Rotate Rotary Selector or push [▲] or [▼] to select a SIM card, and then push [Call History] to restart the transceiver.	_ _ _* (SIM1) *A SIM card name is displayed, if it is named.	_ _ _ (SIM1)
Show Network Select	Selects whether or not to display the "Network Select" item by pushing [FUNC] on the standby screen.	OFF or ON	OFF
Network Select	Selects whether or not to automatically select a network carrier.	Auto, Last accessed, or User select	Auto
Cellular Unit Version	Displays the internal cellular unit version.	–	–
IMEI	Displays the Communication unit's IMEI number.	–	–
Phone Number*9*10	Displays the SIM card's telephone number.	–	–
ICCID*10	Displays the SIM card's ICCID.	–	–

*9 May not be displayed, depending on the inserted SIM card.
*10 Displays the phone number and ICCID of the SIM card that is selected in the "SIM Selection" item.

Set mode items

ⓘ Items or default values may differ, depending on the transceiver's version or presettings. Ask your dealer for details.

◇ IDAS

Item	Description	Option/range	Default
SQL Level	Selects whether or not to display the Squelch level adjustment screen by pushing [FUNC].	ON or OFF	ON
Signal Moni	While transmitting a 5-Tone or DTMF code signal, selects whether or not to release the mute.	ON or OFF	ON
Signal Moni Level	Sets the audio level when the mute is released while using a 5-Tone or DTMF code signaling.	0 ~ 32	10
Signal Moni Linked	Selects whether or not to link the audio level of the Signal Monitor to the volume level that you set on the transceiver.	ON or OFF	ON
Show RAN CH Auto Setting	Selects whether or not to display the RAN CH Auto Setting screen on the transceiver by pushing [FUNC].	OFF or ON	OFF

Section 7 FOR YOUR REFERENCE

Specifications 7-2
◇ General 7-2
◇ 4G (LTE)/3G (W-CDMA) 7-2
◇ IDAS 7-3
◇ Transmitter 7-3
◇ Receiver 7-4
◇ Bluetooth 7-4
Options 7-5
◇ Battery pack/Battery case 7-5
◇ Chargers 7-5
◇ Antennas 7-5
◇ Others 7-5
◇ About the Side Tone function and headset 7-6
◇ Using the BC-227 DESKTOP CHARGER 7-6
◇ Using the BC-226 DESKTOP CHARGER 7-7
◇ Using the BP-305 BATTERY CASE 7-8
◇ Using the LC-195 CARRYING CASE 7-9
◇ Using the HM-238MC TIEPIN TYPE MICROPHONE with a [Sub PTT] switch 7-10
◇ Using the HM-245T DTMF SPEAKER MICROPHONE 7-11
Troubleshooting 7-12
About the licences 7-14

Specifications

ⓘ Measurements made without an antenna.
ⓘ All stated specifications are subject to change without notice or obligation.

◇ General

• Antenna impedance (For IDAS):		50 Ω nominal
• Input impedance (MIC):		2.2 k Ω
• Output impedance (audio):		8 Ω
• Audio power output:		
	Internal speaker	1300 mW typical (at 5% distortion into an 8 Ω load)
	External speaker	650 mW typical (at 5% distortion into an 8 Ω load)
	HM-222H/HM-245T	1300 mW typical (at 5% distortion into an 8 Ω load)
• Operating temperature range:		–30°C ~ +60°C
• Power supply voltage:		7.5 V DC nominal
• Current drain (approximate):		
	RX stand-by	300 mA
	RX max. audio	520 mA (Internal speaker)
	TX High (5 W)	1.8 A
• Dimensions:		61.7 (W) × 42.8 (D) × 140.5 (H) mm (with BP-303)
• Weight (approximate):		320 g (with BP-303)

◇ 4G (LTE)/3G (W-CDMA)

• Frequency band:	LTE Band 1, 3, 7, 8, 20 W-CDMA Band 1, 8
• Modulation:	QPSK, 16QAM, 64QAM
• Rated output power:	23 dBm (LTE), 24 dBm (W-CDMA)
• Receiver sensitivity (QPSK):	–95 dBm maximum

Specifications

◇ IDAS

• Frequency range:	IP730D	136 MHz ~ 174 MHz
	IP740D	350 MHz ~ 470 MHz
• Number of conventional channels:		128 ch / 8 Zone
• Type of emission:		16K0F3E (25.0kHz), 8K50F3E (12.5kHz), 4K00F1E, 4K00F1D (6.25 kHz)

◇ Transmitter

• Rated output power:		5 W (High), 2 W (Low 2), 1 W (Low 1)
• SAR 10g (W/kg):	IP730D	0.67
	IP740D	6.61
• Modulation:		Frequency modulation, FSK modulation
• Frequency error:		±1.0 ppm
• Spurious emissions:		0.25 uW (1 GHz or less), 1.0 uW (More than 1 GHz)
• Adjacent channel power:	IP730D	60 dB minimum, 70 dB typical (Narrow) 70 dB minimum, 74 dB typical (Wide) 60 dB minimum, 67 dB typical (Digital)
	IP740D	60 dB minimum, 64 dB typical (Narrow) 70 dB minimum, 74 dB typical (Wide) 60 dB minimum, 67 dB typical (Digital)
• FSK Error:		5 % maximum, 1 % typical
• FM Hum and Noise: (Without CCITT Filter)		34 dB minimum, 60 dB typical (Narrow) 40 dB minimum, 70 dB typical (Wide)

Specifications

◇ Receiver

• Sensitivity:		0.0 dBuVemf maximum (at 20 dB SINAD) –2.0 dBuVemf typical (at 20 dB SINAD)
• Adjacent channel selectivity:	IP730D	60 dB minimum, 67 dB typical (Narrow) 70 dB minimum, 72 dB typical (Wide) 50 dB minimum, 62 dB typical (Digital)
	IP740D	60 dB minimum, 67 dB typical (Narrow) 70 dB minimum, 72 dB typical (Wide) 54 dB minimum, 63 dB typical (Digital)
• Intermodulation:	IP730D IP740D	65 dB minimum, 67 dB typical 65 dB minimum, 66 dB typical
• Hum and Noise: (Without CCITT Filter)		34 dB minimum, 60 dB typical (Narrow) 40 dB minimum, 60 dB typical (Wide)

◇ Bluetooth

• Frequency range:	2402 ~ 2480 MHz
• Version:	5.3
• Output power:	Class 1, 9.07 dBm (Bluetooth BR/EDR), 8.99 dBm (Bluetooth LE)
• Profile:	HFP, HSP
• Modulation:	GFSK, π/4-DQPSK, 8DPSK

Options

◇ Battery pack/Battery case

• **BP-303** BATTERY PACK

Voltage	Capacity	Approximate operating time*
7.2 V	3200 mAh (Minimum) 3350 mAh (Typical)	24 hours (Cellular mode) 13 hours (IDAS mode)

* Calculated under the following conditions:
- Bluetooth and Backlight are OFF
- The Power Save function for the IDAS mode is OFF
- TX : RX : standby = 5 : 5 : 90

The operating time may be shorter, depending on:
- The operating conditions, such as Bluetooth, GPS, Dual mode, and so on.
- The distance with the cellular station or the signal strength.

• **BP-305** BATTERY CASE
Battery case with 5 AA battery cells.

◇ Chargers

• **BC-227** DESKTOP CHARGER + **BC-242** AC ADAPTER, **BC-123S** AC ADAPTER, **OPC-515L** DC POWER CABLE
To rapidly charge the battery pack.
Charging time: Approximately 4.4 hours for the BP-303
ⓘ OPC-515L must be purchased separately.

• **BC-226** DESKTOP CHARGER + **BC-228** AC ADAPTER
You can connect up to 6 BC-226 together.
Charging time: Approximately 4.2 hours for the BP-303
ⓘ A power adapter may be supplied, depending on the charger's version.

◇ Antennas

• **FA-SC25V/FA-SC28V/FA-SC29V/FA-SC55V** VHF ANTENNAS
FA-SC25V 136–150 MHz
FA-SC28V 148–162 MHz
FA-SC29V 160–174 MHz
FA-SC55V 150–174 MHz

• **FA-SC26VS/FA-SC27VS/FA-SC56VS/FA-SC57VS** VHF STUBBY ANTENNAS
FA-SC26VS 136–144 MHz
FA-SC27VS 142–150 MHz
FA-SC56VS 150–162 MHz
FA-SC57VS 160–174 MHz

• **FA-SC61VC** VHF CUT ANTENNAS
FA-SC61VC 136–174 MHz

• **FA-SC01U/FA-SC02U/FA-SC25U/FA-SC57U** UHF ANTENNAS
FA-SC01U 350–400 MHz
FA-SC02U 330–380 MHz
FA-SC25U 400–430 MHz
FA-SC57U 430–470 MHz

• **FA-SC26US/FA-SC73US** UHF STUBBY ANTENNAS
FA-SC26US 400–450 MHz
FA-SC73US 450–490 MHz

• **FA-SC61UC** UHF CUT ANTENNAS
FA-SC61UC 380–520 MHz

• **FA-SC62V/FA-SC63V** HIGH GAIN ANTENNAS
FA-SC62V 155 MHz
FA-SC63V 160 MHz

◇ Others

• **MB-136, MB-133** BELT CLIP

• **MB-96F, MB-96FL, MB-96N** BELT HANGERS

• **LC-195** CARRYING CASE + **MB-57L** SHOULDER STRAP

• **VS-3** Bluetooth® HEADSET
The Bluetooth headset with a [PTT] switch.

• **VS-4MC/VS-5MC*** PTT SWITCH CABLE + **HS-94, HS-95, HS-97** HEADSET
VS-5MC: Used to connect a headset to a transceiver.
HS-94: Ear-hook type
HS-95: Neck-arm type
HS-97: Throat microphone
* Non-waterproof

• **HM-184H, HM-222, HM-222H, HM-236** SPEAKER MICROPHONE
HM-184H, HM-236: Meets IP67 dust-tight and waterproof protection.
HM-222: Meets IP68 dust-tight and waterproof protection.
HM-222H: Loud speaker version of the HM-222.

• **HM-163MC** TIEPIN TYPE MICROPHONE

• **HM-238MC** TIEPIN TYPE MICROPHONE
With a [Sub PTT] switch.

• **HM-245T** DTMF SPEAKER MICROPHONE
With a Ten-Keypad used for sending DTMF codes.
Meets IP67 waterproof protection.

• **EH-15B** EARPHONE, **SP-26** TUBE EARPHONE, **SP-28** EAR HOOK TYPE EARPHONE
For use with the HM-163MC or HM-238MC

• **SP-27** TUBE EARPHONE, **SP-29** EAR HOOK TYPE EARPHONE, **SP-40** EARPHONE + **AD-135** EARPHONE ADAPTER
AD-135: Used to connect an earphone to the transceiver's Multi-connector.

• **CP-23L** CIGARETTE LIGHTER CABLE
For BC-227, 12 V
Used when charging a battery pack through a cigarette lighter socket.

Some options may not be available in some countries. Ask your dealer for details.

Options

◇ About the Side Tone function and headset

The Side tone function (p. 6-9) works differ depending on the connected microphone, as shown below.

ⓘ Usable options may be added in the future. Ask your dealer for details of how they work.

When the HM-238MC or VS-5MC is attached:
The transceiver always outputs your voice to a headset.

When the HM-163MC, HM-184H, HM-222, HM-222H, HM-236, HM-245T, or VS-4MC is attached:
The transceiver outputs your voice to a headset while holding down [PTT].

◇ Using the BC-227 DESKTOP CHARGER


Charging time: approximately 4.4 hours for the BP-303.

CAUTION: Before using the charger, read the 'Battery caution' and 'Charging caution' on the INSTRUCTIONS that boxed with the transceiver.

❍Status indicator

Light color	Status
Orange	Charging
Green	Charging is completed.
Blinks orange and green	Charging failed. It may have some problems.

NOTE:
- The transceiver MUST be turned OFF while charging. Otherwise:
  - The battery will not be charged properly.
  - The battery life may be shortened.
- Do not transmit while charging. When you need to transmit, remove the transceiver from the charger, and then turn ON the power.
- If the battery pack does not properly charge when it is attached to the transceiver, remove it from the transceiver and insert only the battery pack into the charger.

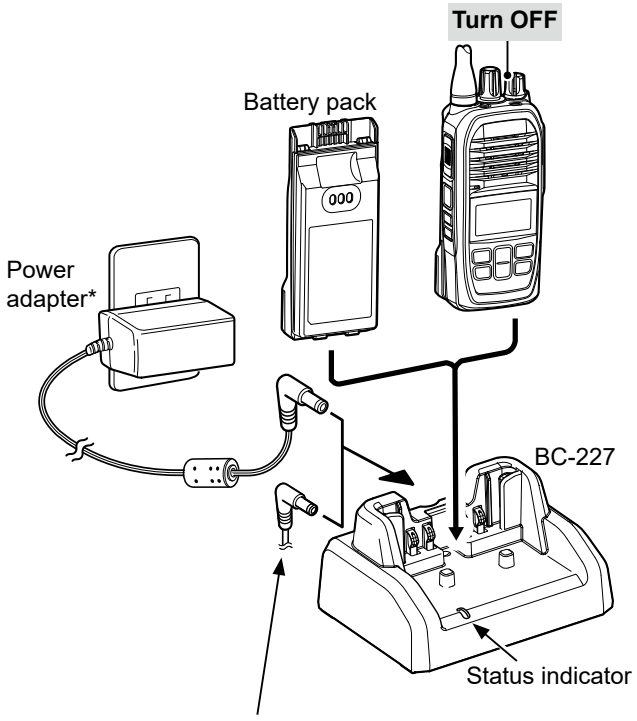

The CP-23L (for a 12 V cigarette lighter socket) can be used instead of the power adapter.


*The shape may be different, depending on the charger version

Options

◇ Using the BC-226 DESKTOP CHARGER

Charging time: approximately 4.2 hours for the BP-303.

CAUTION: Before using the charger, read the 'Battery caution' and 'Charging caution' on the INSTRUCTIONS that boxed with the transceiver.

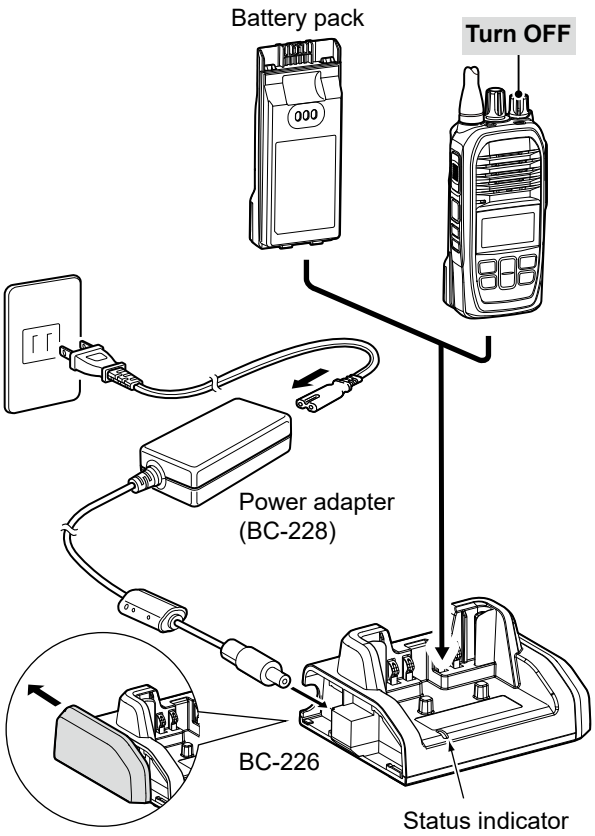

❍Status indicator


Light color	Status
Orange	Charging
Green	Charging is completed.
Blinks orange and green	Charging failed. It may have some problems.

NOTE:
- The transceiver MUST be turned OFF while charging. Otherwise:
  - The battery will not be charged properly.
  - The battery life may be shortened.
- Do not transmit while charging. When you need to transmit, remove the transceiver from the charger, and then turn ON the power.
- If the battery pack does not properly charge when it is attached to the transceiver, remove it from the transceiver and insert only the battery pack into the charger.

❍Connecting the BC-226 together

You can connect up to 6 BC-226 together.

1. Remove the charger's right cover. (❶)
2. Snap the DC power plug to another charger's DC power jack. (❷)

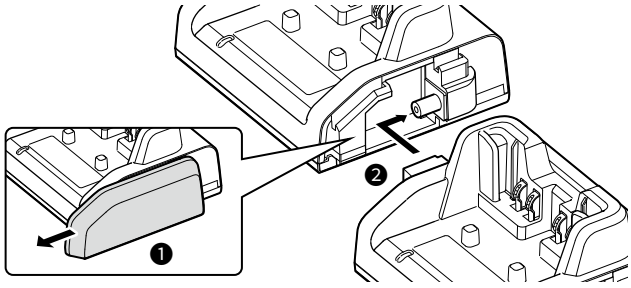


WARNING: NEVER connect more than 6 chargers together. It may result in an electric shock, cause a fire, overheating, or damage chargers and AC adapter.

❍Fuse replacement

If a fuse blows, find and repair the cause of the problem. Then replace the damaged fuse with a new, adequately rated fuse.

Fuse type: 5 A/58 V (low profile mini blade fuse)

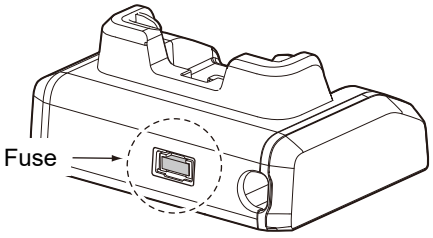


NOTE: Remove the fuse using needle-nose pliers.

Options


◇ Using the BP-305 BATTERY CASE

Install 5 × AA (LR6) size alkaline batteries, as shown below.


1. Open the battery case.

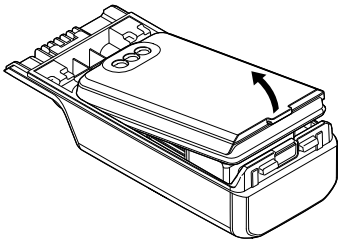


2. Push the tab (❶), and then remove the battery holder (❷).

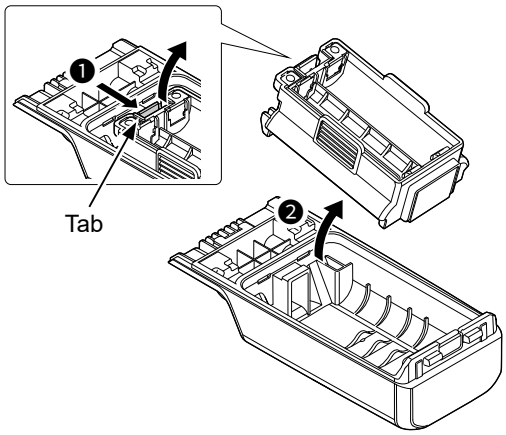


3. Install batteries in the holder.

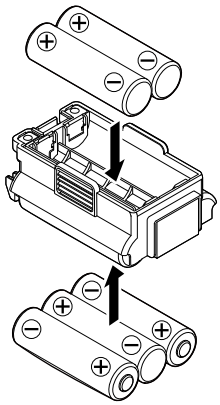

4. Insert the battery holder into the battery case until the tab makes a ‘click’ sound.

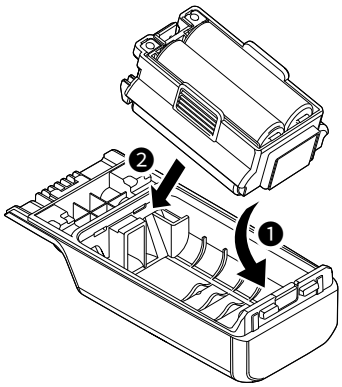

5. Firmly close the battery case.
   ⓘ Make sure that the waterproof packing does not stick out of the case.

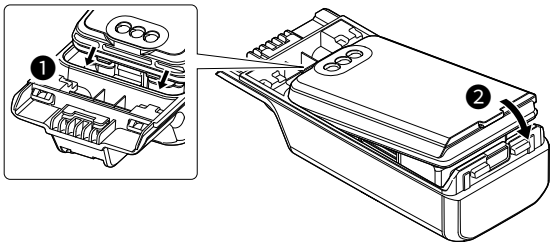

WARNING: NEVER use batteries other than alkaline batteries, such as manganese batteries or rechargeable batteries. It may cause rupture, ignition, fire, heat generation, liquid leakage, electric shock, and burns.


CAUTION:
- **DO NOT** incinerate used battery cells since internal battery gas may cause them to rupture.
- **DO NOT** expose a detached battery case to water. If the battery case gets wet, be sure to wipe it dry before using it.
- **DO NOT** use batteries whose insulated cover is damaged.

NOTE:
- When installing the batteries, make sure they are all the same brand, type and capacity. Also, do not mix new and old batteries together.
- Keep the battery terminals clean. It’s a good idea to occasionally clean them.
- Remove alkaline batteries when the battery case is not used.
- The transceiver turns OFF when the battery case voltage falls below the operating range of the transceiver.
- The transmission output power in the IDAS mode will be reduced to low power when using the battery case and alkaline batteries.


Options

◇ Using the LC-195 CARRYING CASE

The LC-195 is a leather case that is usable when the battery pack is attached. Adjust the fixing position with the hook-and-loop fasteners.

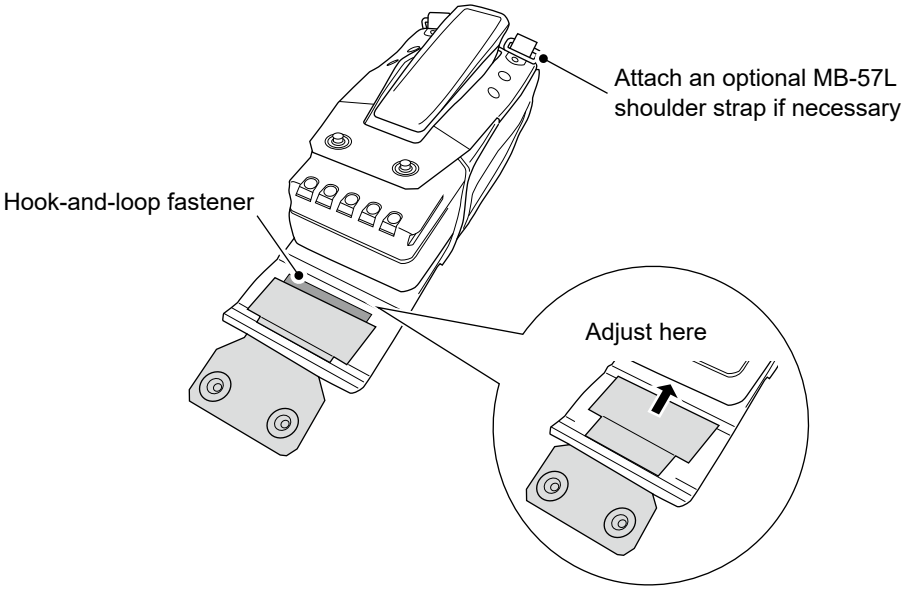

You can charge even when the leather case is attached, as shown below.

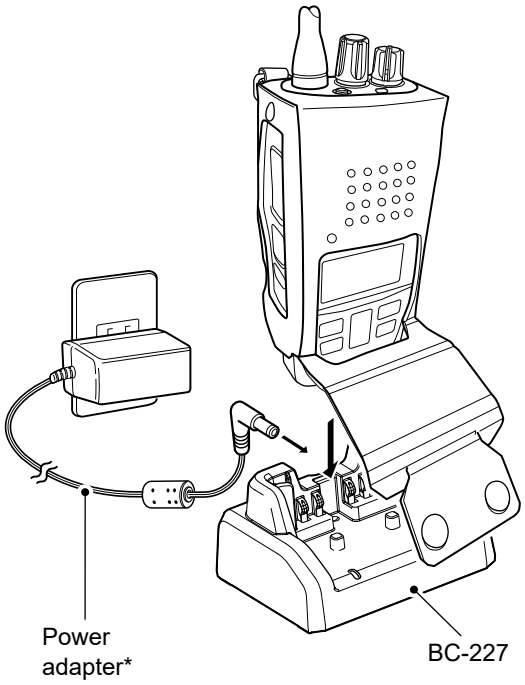


*The shape may be different, depending on the charger version

Options

◇ Using the HM-238MC TIEPIN TYPE MICROPHONE with a [Sub PTT] switch

The HM-238MC is a Tie-clip type microphone that can operate the [PTT], [Sub PTT], and [Side 1] switches of the transceiver.

NOTE: When the HM-238MC is attached to the transceiver, no audio is output from the transceiver's speaker. **BE SURE** to connect the EH-15B, SP-26, or SP-28 earphones to the HM-238MC before use.

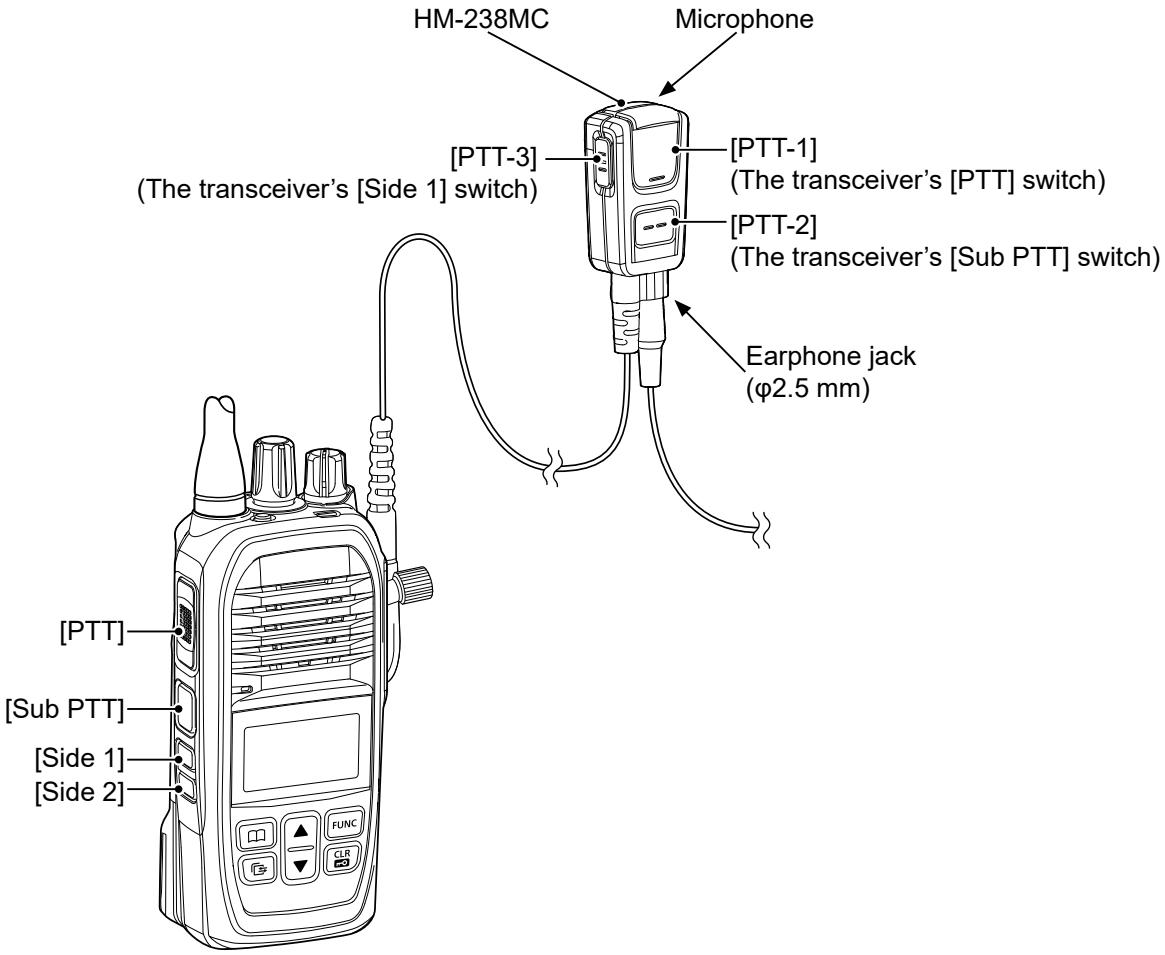


Options

◇ Using the HM-245T DTMF SPEAKER MICROPHONE

The HM-245T is the microphone that has Ten-keypad, that allows you to send DTMF codes. You can connect an earphone (user supplied) to the earphone jack.

NOTE: When the HM-245T is attached to the transceiver, audio is output from the HM-245T's speaker.

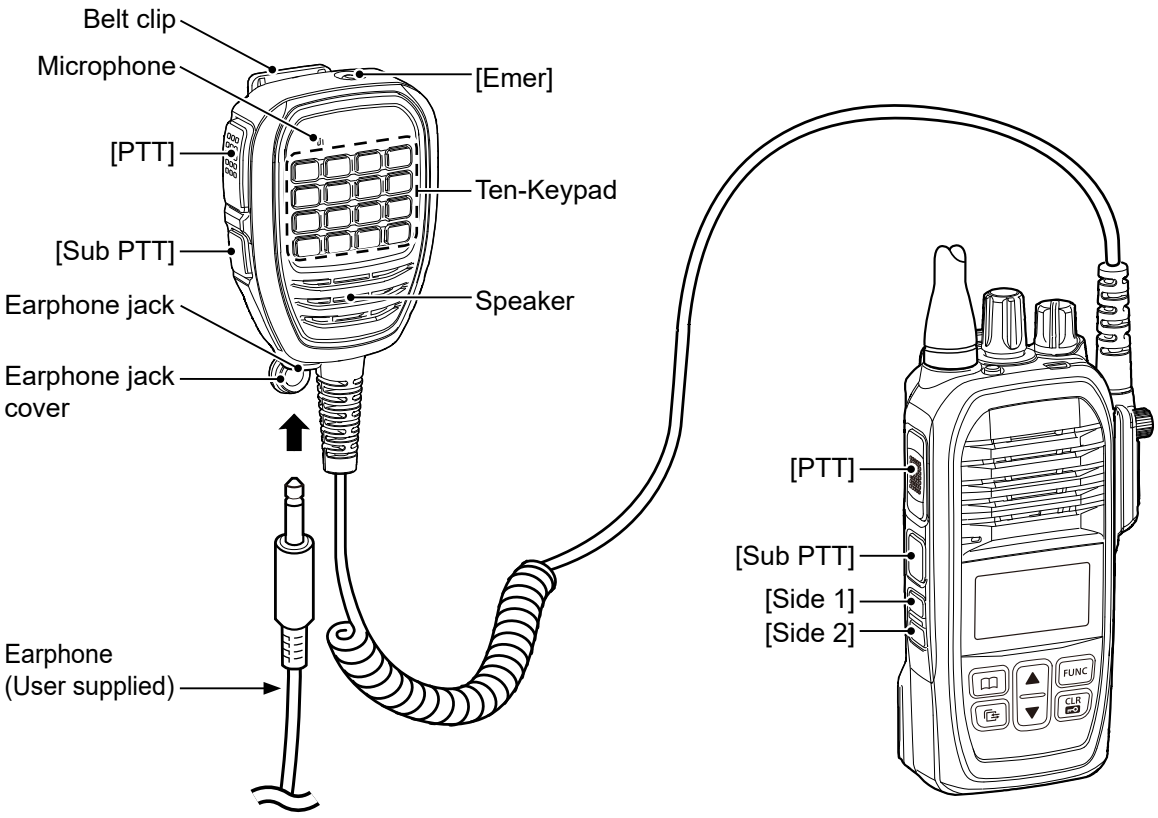

NOTE:
- **NEVER** immerse the connector in water. If the connector becomes wet, be sure to dry it BEFORE attaching to the transceiver.
- The microphone element is located at the top left of the speaker microphone, as shown in the illustration above. To maximize the readability of your transmitted audio, hold the microphone approximately 5 ~ 10 cm from your mouth, and then speak at your normal voice level.

CAUTION: The HM-245T meets IP67 requirement for dust-tight and waterproof protection only when the earphone jack cover is firmly closed. The microphone does NOT meet dust-tight and waterproof protection if an earphone is attached.

Sending DTMF codes:

● While holding down [PTT], push the keys on the Ten-Keypad.
ⓘ The [Sub PTT] is also usable in the Dual mode (p. 5-12).

Troubleshooting

The following conditions are not due to a malfunction. Check before sending a request for repair.

No power comes ON.

- Loose connection of the battery pack.
  - Clean the battery pack terminals.
- The battery is exhausted.
  - Charge the battery pack. (p. 7-6)
- The battery pack's over-discharge protection circuitry is activated.
  - Remove the battery pack from the transceiver, then charge it for a while. Attach the battery pack to the transceiver again, then turn ON the power.

No sound comes from the speaker nor earphone.

- Volume level is set too low.
  - Rotate [VOL] to adjust the volume level.
- Loose earphone plug connection.
  - Firmly insert the plug.

Calls cannot be made.

- The call-to party number or group number is wrong.
  - Check the call-to party number or group number.

No beep sounds.

- Key Beep Volume level is set too low.
  - Adjust the volume to a suitable level in the Set mode. (p. 6-3)

The "4G" blinks, "Connecting...," or "Out of Range" is displayed (standby screen is not displayed).

- The transceiver is located out of the service area.
  - Change your location and try again.
  - Restart the transceiver.

No reply is received.

- The transceiver is located out of the service area. ("4G" blinks.)
  - Change your location and try again.
- The transceiver is not registered to the system. ("4G" is displayed.)
  - Push [PTT] to re-register the transceiver to the system.
  - Wait for a while, or change your location.
  - Check that the Cellular line is established.
- The operator is away from the transceiver, or the transceiver is turned OFF.
  - Wait until the operator is back, or ask your system manager.

"Key lock" is displayed when you push any keys.

- The keys are locked.
  - Hold down [CLR/Lock] to unlock. (p. 2-4)

Troubleshooting

The charger's status indicator blinks orange, or alternately blinks orange and green during charging.

- The battery pack is not properly inserted.
  - Properly insert the battery pack. (p. 7-6)
- Charging the battery pack outside of the chargeable temperature range.
  - Charge the battery pack in the chargeable temperature range (0˚C to 60˚C (32˚F to 140˚F)).
- Loose connection of charging transceivers.
  - Clean the charger terminals.
- The transceiver power is ON while charging.
  - Turn OFF the power while charging. (p. 7-6)

The charger's status indicator turns OFF during charging.

- The battery pack is not properly inserted.
  - Properly insert the battery pack. (p. 7-6)

The deleted recorded audio still exists, or the recorded audio is lost.

- The battery pack was removed before the recorded audio was deleted/saved from/to memory.
  - Remove the battery pack after "Power OFF…" is displayed.

Failed to pair your Bluetooth headset.

- The Bluetooth headset is not in the Pairing mode.
  - Confirm the Bluetooth headset is in the Pairing mode, and then try again. (p. 5-3)
- There are other active Bluetooth devices nearby.
  - Stop using other Bluetooth devices.
  - Use the transceiver away from other Bluetooth devices.
- There are other devices that are operating in the 2.4 GHz band.
  - Use the transceiver away from the other devices, or stop using those devices.

"Pairing list is full" is displayed in the Pairing screen.

- Number of paired devices exceeds the maximum number possible.
  - Delete a Bluetooth device from the pairing list.

The call was suddenly cut off /Noise is heard.

- Too far from the Bluetooth device (When using a Bluetooth headset).
  - Get closer to the Bluetooth device.
    ⓘ The communication range of Bluetooth is approximately 10 meters.
- Electromagnetic interference from other electronic devices.
  - Use the transceiver away from the other devices, or stop using those devices.

"Activate locked" is displayed when turn ON the transceiver.

- Internet connection is unstable.
  - Restart the transceiver.

About the licences

Mbed TLS

Unless specifically indicated otherwise in a file, Mbed TLS files are provided under the Apache License 2.0, or the GNU General Public License v2.0 or later (SPDX-License-Identifier: Apache-2.0 OR GPL-2.0-or-later).
A copy of these licenses can be found in apache-2.0.txt and gpl-2.0.txt

Apache License
Version 2.0, January 2004
http://www.apache.org/licenses/

TERMS AND CONDITIONS FOR USE, REPRODUCTION, AND DISTRIBUTION

1. Definitions.
   “License” shall mean the terms and conditions for use, reproduction, and distribution as defined by Sections 1 through 9 of this document.

   “Licensor” shall mean the copyright owner or entity authorized by the copyright owner that is granting the License.

   “Legal Entity” shall mean the union of the acting entity and all other entities that control, are controlled by, or are under common control with that entity. For the purposes of this definition, “control” means (i) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (ii) ownership of fifty percent (50%) or more of the outstanding shares, or (iii) beneficial ownership of such entity.

   “You” (or “Your”) shall mean an individual or Legal Entity exercising permissions granted by this License.

   “Source” form shall mean the preferred form for making modifications, including but not limited to software source code, documentation source, and configuration files.

   “Object” form shall mean any form resulting from mechanical transformation or translation of a Source form, including but not limited to compiled object code, generated documentation, and conversions to other media types.

   “Work” shall mean the work of authorship, whether in Source or Object form, made available under the License, as indicated by a copyright notice that is included in or attached to the work (an example is provided in the Appendix below).

   “Derivative Works” shall mean any work, whether in Source or Object form, that is based on (or derived from) the Work and for which the editorial revisions, annotations, elaborations, or other modifications represent, as a whole, an original work of authorship. For the purposes of this License, Derivative Works shall not include works that remain separable from, or merely link (or bind by name) to the interfaces of, the Work and Derivative Works thereof.

   “Contribution” shall mean any work of authorship, including the original version of the Work and any modifications or additions to that Work or Derivative Works thereof, that is intentionally submitted to Licensor for inclusion in the Work by the copyright owner or by an individual or Legal Entity authorized to submit on behalf of the copyright owner. For the purposes of this definition, “submitted” means any form of electronic, verbal, or written communication sent
   to the Licensor or its representatives, including but not limited to communication on electronic mailing lists, source code control systems, and issue tracking systems that are managed by, or on behalf of, the Licensor for the purpose of discussing and improving the Work, but excluding communication that is conspicuously marked or otherwise designated in writing by the copyright owner as “Not a Contribution.”

   “Contributor” shall mean Licensor and any individual or Legal Entity on behalf of whom a Contribution has been received by Licensor and subsequently incorporated within the Work.

2. Grant of Copyright License. Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable copyright license to reproduce, prepare Derivative Works of, publicly display, publicly perform, sublicense, and distribute the Work and such Derivative Works in Source or Object form.

About the licences

3. Grant of Patent License. Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable (except as stated in this section) patent license to make, have made, use, offer to sell, sell, import, and otherwise transfer the Work, where such license applies only to those patent claims licensable by such Contributor that are necessarily infringed by their Contribution(s) alone or by combination of their Contribution(s) with the Work to which such Contribution(s) was submitted. If You institute patent litigation against any entity (including a cross-claim or counterclaim in a lawsuit) alleging that the Work or a Contribution incorporated within the Work constitutes direct or contributory patent infringement, then any patent licenses granted to You under this License for that Work shall terminate as of the date such litigation is filed.

4. Redistribution. You may reproduce and distribute copies of the Work or Derivative Works thereof in any medium, with or without modifications, and in Source or Object form, provided that You meet the following conditions:

   (a) You must give any other recipients of the Work or Derivative Works a copy of this License; and
   (b) You must cause any modified files to carry prominent notices stating that You changed the files; and
   (c) You must retain, in the Source form of any Derivative Works that You distribute, all copyright, patent, trademark, and attribution notices from the Source form of the Work, excluding those notices that do not pertain to any part of the Derivative Works; and
   (d) If the Work includes a “NOTICE” text file as part of its distribution, then any Derivative Works that You distribute must include a readable copy of the attribution notices contained within such NOTICE file, excluding those notices that do not pertain to any part of the Derivative Works, in at least one of the following places: within a NOTICE text file distributed as part of the Derivative Works; within the Source form or documentation, if provided along with the Derivative Works; or, within a display generated by the Derivative Works, if and wherever such third-party notices normally appear. The contents of the NOTICE file are for informational purposes only and do not modify the License. You may add Your own attribution notices within Derivative Works that You distribute, alongside or as an addendum to the NOTICE text from the Work, provided that such additional attribution notices cannot be construed as modifying the License. You may add Your own copyright statement to Your modifications and may provide additional or different license terms and conditions for use, reproduction, or distribution of Your modifications, or for any such Derivative Works as a whole, provided Your use, reproduction, and distribution of the Work otherwise complies with the conditions stated in this License.

5. Submission of Contributions. Unless You explicitly state otherwise, any Contribution intentionally submitted for inclusion in the Work by You to the Licensor shall be under the terms and conditions of this License, without any additional terms or conditions. Notwithstanding the above, nothing herein shall supersede or modify the terms of any separate license agreement you may have executed with Licensor regarding such Contributions.

6. Trademarks. This License does not grant permission to use the trade names, trademarks, service marks, or product names of the Licensor, except as required for reasonable and customary use in describing the origin of the Work and reproducing the content of the NOTICE file.

7. Disclaimer of Warranty. Unless required by applicable law or agreed to in writing, Licensor provides the Work (and each Contributor provides its Contributions) on an “AS IS” BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied, including, without limitation, any warranties or conditions of TITLE, NON-INFRINGEMENT, MERCHANTABILITY, or FITNESS FOR A PARTICULAR PURPOSE. You are solely responsible for determining the appropriateness of using or redistributing the Work and assume any risks associated with Your exercise of permissions under this License.

8. Limitation of Liability. In no event and under no legal theory, whether in tort (including negligence), contract, or otherwise, unless required by applicable law (such as deliberate and grossly negligent acts) or agreed to in writing, shall any Contributor be liable to You for damages, including any direct, indirect, special, incidental, or consequential damages of any character arising as a result of this License or out of the use or inability to use the Work (including but not limited to damages for loss of goodwill, work stoppage, computer failure or malfunction, or any and all other commercial damages or losses), even if such Contributor has been advised of the possibility of such damages.

9. Accepting Warranty or Additional Liability. While redistributing the Work or Derivative Works thereof, You may choose to offer, and charge a fee for, acceptance of support, warranty, indemnity, or other liability obligations and/or rights consistent with this License. However, in accepting such obligations, You may act only on Your own behalf and on Your sole responsibility, not on behalf of any other Contributor, and only if You agree to indemnify, defend, and hold each Contributor harmless for any liability incurred by, or claims asserted against, such Contributor by reason of your accepting any such warranty or additional liability.

END OF TERMS AND CONDITIONS

About the licences

APPENDIX: How to apply the Apache License to your work.

To apply the Apache License to your work, attach the following boilerplate notice, with the fields enclosed by brackets “[]” replaced with your own identifying information. (Don’t include the brackets!) The text should be enclosed in the appropriate comment syntax for the file format. We also recommend that a file or class name and description of purpose be included on the same “printed page” as the copyright notice for easier identification within third-party archives.

Copyright [yyyy] [name of copyright owner]

Licensed under the Apache License, Version 2.0 (the “License”);
you may not use this file except in compliance with the License.
You may obtain a copy of the License at

http://www.apache.org/licenses/LICENSE-2.0

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an “AS IS” BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied.
See the License for the specific language governing permissions and limitations under the License.

About the licences

GNU GENERAL PUBLIC LICENSE
Version 2, June 1991
Copyright (C) 1989, 1991 Free Software Foundation, Inc.,51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA
Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble
The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

About the licences

GNU GENERAL PUBLIC LICENSE
TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The “Program”, below, refers to any such program or work, and a “work based on the Program” means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term “modification”.) Each licensee is addressed as “you”. Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program’s source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

   You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

   a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
   b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
   c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

   These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

   Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

   In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

About the licences

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

   a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
   b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
   c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

   The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

   If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

About the licences

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

   If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

   It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

   This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

   Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and “any later version”, you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

About the licences

NO WARRANTY

11.BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12.IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

Appendix: How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the “copyright” line and a pointer to where the full notice is found.

<one line to give the program’s name and a brief idea of what it does.>
Copyright (C) <year> <name of author>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc.,
51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA.

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

About the licences

Gnomovision version 69, Copyright (C) year name of author
Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w'.
This is free software, and you are welcome to redistribute it under certain conditions; type `show c' for details.

The hypothetical commands `show w' and `show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w' and `show c'; they could even be mouse-clicks or menu items--whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a “copyright disclaimer” for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program `Gnomovision' (which makes passes at compilers) written by James Hacker.

<signature of Ty Coon>, 1 April 1989
Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License.

JSMN
MIT License

Copyright (c) 2010 Serge A. Zaitsev

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the “Software”), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED “AS IS”, WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

How the World Communicates

A7605-13EX-3
© 2024–2025 Icom Inc. Dec. 2025

Icom Inc.
1-1-32 Kamiminami, Hirano-ku, Osaka 547-0003, Japan